

# Ring Main Unit Operation Instruction



**Product Type**  
RVAC

**Product Name**  
Indoor, Fixed, AC Metal-Enclosed Switchgear (SF6 RMU)

**EATON**

*Powering Business Worldwide*

**Dear Customers:**

Thank you for your purchase of the indoor fixed AC metal enclosed switchgear (hereafter as SF6 RMU). For correct and safe operation of this equipment, make sure to read this manual carefully prior to the installation of the equipment. Please keep the manual properly after reading, for future reference when necessary.

The manual is aimed to assist technicians to install, commission, operate, run and maintain SF6 ring main units (RMU). Users shall observe proper operating procedures in running the equipment.

The manual has considered the issues as specific as possible during the installation and usage, but can not cover all the possible changes concerning the equipment itself and the operating conditions. In case of any special occurrence, contact the After Sales Department of Cooper Power System.

The information within the manual is subject to changes without further notice.

**⚠ WARNING**

**THIS IS A SIGN TO INDICATE THAT FAILURE TO FOLLOW THE OPERATING INSTRUCTIONS MAY CAUSE PERSONAL INJURIES OR LIFE DANGERS.**

**⚠ CAUTION**

**THIS IS A SIGN TO INDICATE THAT FAILURE TO FOLLOW THE INSTRUCTIONS MAY CAUSE DAMAGES TO THE EQUIPMENT.**

Add optional mark.

## Contents

| Description   | Page |
|---|------|
| Chapter 1 Product introduction.....                         | 4    |
| 1. General description.....                                 | 4    |
| 2. Operating conditions .....                               | 4    |
| 3. Catalogue numbering system.....                          | 5    |
| 4. Technical data.....                                      | 5    |
| 5. Standards .....  | 6    |
| 6. Typical functions .....                                  | 7    |
| 7. Typical schemes and structures .....                     | 8    |
| Chapter 2 Transport, handling, inspection and storage ..... | 14   |
| 1. Transport and handling.....                              | 14   |
| 2. Inspection and storage .....                             | 14   |
| Chapter 3 Installation .....                                | 15   |
| 1. RMU dimensions .....                                     | 15   |
| 2. Base form .....  | 15   |
| 3. RMU fixation .....                                       | 17   |
| 4. RMU grounding .....                                      | 17   |
| 5. Cable installation.....                                  | 18   |
| 6. Fuse installation.....                                   | 20   |
| 7. Cabinet connectionand installation .....                 | 22   |
| 8. Inspection and cleaning after installation.....          | 22   |
| Chapter 4 Operation .....                                   | 23   |
| 1. Load switch cabinet .....                                | 23   |
| 2. Combination unit cabinet .....                           | 24   |
| 3. Circuit breaker cabinet .....                            | 26   |
| 4. RVAC cabinet types .....                                 | 28   |
| Chapter 5 Operation, maintenance and repair .....           | 30   |
| 1. Notice for operations .....                              | 30   |
| 2. Maintenance and repair .....                             | 31   |
| Chapter 6 Supplied documents and accessories .....          | 33   |
| Chapter 7 Ordering information .....                        | 33   |

## Chapter 1 Product introduction

### 1. General description

The RVAC indoor fixed AC metal enclosed switchgear (hereafter as RMU) is a new generation of SF6 gas insulated switchgear developed by Cooper Power Systems, relying on the Edison R&D center of powerful technical advantages, adopting the computer simulation technology, aimed to provide high quality products for electric network. This product is mainly used for the secondary electrical distribution system of 3-phase AC 50Hz, with the rated voltage of 12kV and 24kV, especially applicable for capturing and distributing electric power in power systems such as small-sized secondary distribution substations, switching stations, industrial and mining enterprises, urban residential areas, airports, railways, tunnels, and high rise buildings, greatly improving the reliability and utilization rate of the powersupply.

This product adopts a three-phase common enclosure structure, using SF6 gas of excellent insulation and arc extinguishing performance as medium, and achieving the goal of miniaturization and light weight with optimized design; the product also uses interface insulation structure, allowing flexible plug-in and expansion of high voltage components. The product offers a range of advantages such as simple structure, compact size, low price, small floor space, high power supply quality and high power supply safety. The basic module is a one-circuit load switch cabinet and a one-circuit load switch plus current limiting fuse combination cabinet module. In addition, several additional modules are offered, including 3-circuit common enclosure RMU (two incomings and one outgoing), one incoming and one outgoing, bus tie cabinet, metering cabinet, voltage transforming cabinet. The circuit breaker cabinet is also developed and equipped, to expand the usage scope of the RMU. On the basis of the indoor cases, the corresponding outdoor cases are supplied to expand the use in outdoor environments.

The RUM has been equipped separately with primary circuit devices inside the sealed enclosure, including the load switch or load switch plus current limiting fuse. The load switch is used to control the circuits to open and close load current and overload current, while the load switch plus current limiting fuse is used to control, open and close, and isolate the transformer and its distribution circuit, as well as to offer protections against short circuit current and overload current at the medium voltage side of the medium voltage transformer, the transformer and low voltage distribution circuits.

### 2. Operating conditions

#### 2.1. Ambient air temperature:

Upper limit: +40°C, and the average temperature measured within 24 hours ≤35°C;  
Lower limit: -40°C;

#### 2.2. Humidity

Relative humidity: daily average ≤95%, monthly average ≤90%.

Vapor pressure: daily average ≤2.2kPa, monthly average ≤1.8kPa.

#### 2.3. Altitude: ≤1000m.


#### 2.4. The ambient air is not apparently affected by dust, smoke, corrosive or flammable gas, vapor or salt mist pollutions.

#### 2.5. The vibration or quake external to the switchgear and controlgear is negligible.

#### 2.6. The amplitude of the electromagnetic interference induced in the secondary system does not exceed 1.6kV.

### 3. Catalogue numbering system

The structure and meaning of the catalogue numbering system are shown below.

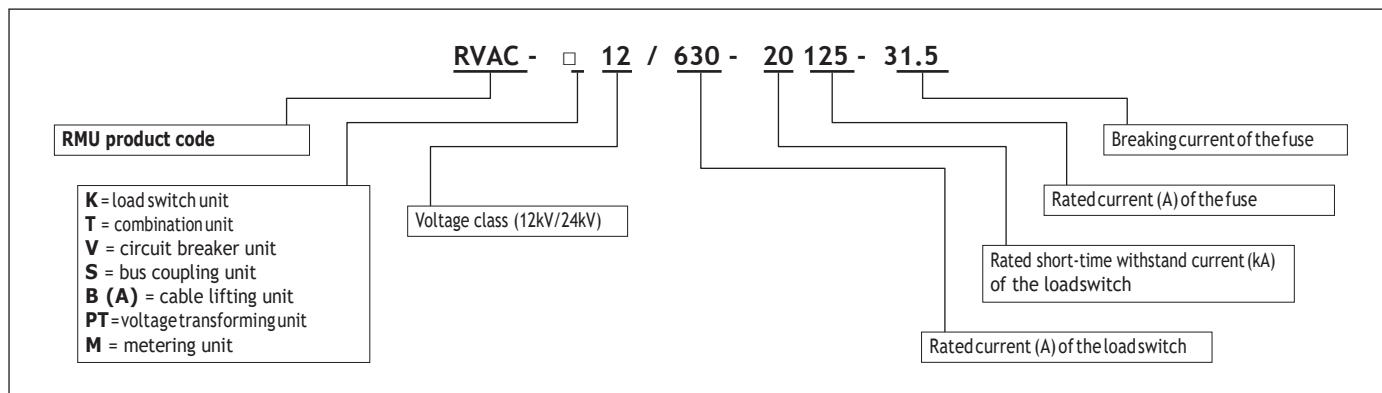

### 4. Technical data

#### 4.1. Rated technical data:

| No. | Item  | Unit                           | Data               | Data               |
|-----|---|--------------------------------|--------------------|--------------------|
| 1   | Rated voltage   | kV                             | 12                 | 24                 |
| 2   | Rated frequency   | Hz                             | 50                 | 50                 |
| 3   | Rated current   | A                              | 630                | 630                |
|     | Load break switch   | A                              | 125                | 100                |
| 4   | 1min power frequency withstand voltage                                      | Phase to earth, phase to phase | kV                 | 42                 |
|     | Isolating distance  | kV                             | 48                 | 60 (79)            |
| 5   | Lightning impulse withstand voltage   | Phase to earth, phase to phase | kV                 | 95                 |
|     | Isolating distance  | kV                             | 110                | 145                |
| 6   | Short-time withstand current (rms)  | Main circuit 4s                | ka                 | 20                 |
|     | Earthing switch 2s  | ka                             | 20                 | 20                 |
|     | Earthing connection circuit 2s  | ka                             | 17.4               | 17.4               |
| 7   | Short-time withstand current (peak)   | Main circuit                   | ka                 | 50                 |
|     | Ground switch   | ka                             | 50                 | 50                 |
|     | Earthing connection circuit   | ka                             | 43.5               | 43.5               |
| 8   | Rated short circuit making current (peak)                                   | Load break switch              | ka                 | 50                 |
|     | Earthing switch   | ka                             | 50                 | 50                 |
| 9   | Load break switch's rated active load breaking current                      | A                              | 630                | 630                |
| 10  | Load break switch's rated closed-loop breaking current                      | A                              | 630                | 630                |
| 11  | Load break switch's 5% rated active load breaking current                   | A                              | 31.5               | 31.5               |
| 12  | Load break switch's rated cable charging breaking current                   | A                              | 10                 | 25                 |
| 13  | Fuse's rated short circuit breaking current                                 | ka                             | 31.5               | 31.5               |
| 14  | Fuse's rated short circuit making current                                   | ka                             | 80                 | 80                 |
| 15  | Load break switch's rated transfer current                                  | A                              | 1850               | 1400               |
| 16  | Load break switch's rated active load breaking operations                   | operation                      | 200                | 200                |
| 17  | Ground fault current switching  | A                              | 5 (10 operations)  | 5 (10 operations)  |
| 18  | Line and cable charging current switching under the ground fault conditions | A                              | 20 (10 operations) | 20 (10 operations) |
| 19  | Mechanical Endurance  | Load breakswitch               | operation          | 5000               |
|     | Earthing switch   | operation                      | 2000               | 3000               |
| 20  | Rated pressure of SF <sub>6</sub> gas (20°C, meter pressure)                | MPa                            | 0.03               | 0.03               |
| 21  | SF <sub>6</sub> gas leakage rate  | yearly                         | ≤ 0.1%             | ≤ 0.1%             |

#### 4.2. Rated current of the fuse:

Based on the capacity of the transformer, the rated current of the fuse is selected, as shown below.

(no overload, -25°C<0<40°C)

| Transformer capacity<br>kVA | Rated current<br>A | Transformer capacity<br>kVA | Rated current<br>A |
|-----------------------------|--------------------|-----------------------------|--------------------|
| 50                          | 10                 | 315                         | 31.5               |
| 75                          | 10                 | 400                         | 40                 |
| 100                         | 16                 | 500                         | 50                 |
| 125                         | 16                 | 630                         | 63                 |
| 160                         | 16                 | 800                         | 80                 |
| 200                         | 20                 | 1000                        | 100                |
| 250                         | 25                 | 1250                        | 125                |

#### 5. Standards

|                  |  |
|------------------|--|
| GB3906-2006      | 3.6kV~40.5kV AC Metal Enclosed Switchgear and Controlgear  |
| GB/T11022-1999   | Common Technical Requirements of High Voltage Switchgear and Controlgear Standard  |
| GB3804-2004      | 3.6kV~40.5kV High Voltage AC Load Switch   |
| GB16926-1997     | AC High Voltage Load Switch - Fuse Combination Unit  |
| GB1984-2003      | High Voltage AC Circuit Breaker  |
| GB1985-2004      | AC High Voltage Isolating Switch and Ground Switch   |
| GB3309-1989      | Mechanical Testing under Normal Temperature of High Voltage Switchgear   |
| GB/T16927.1-1997 | High Voltage Testing Technique Part 1: General Testing Requirements  |
| GB/T7354-2003    | Partial Discharge Measurement  |
| GB8905-1996      | Gas Management and Inspection Guideline of SF6 Electrical Equipment  |
| GB11023-1989     | SF6 Gas Sealing Test Guideline of High Voltage Switchgear  |
| GB12022-1989     | Industrial SF6   |
| GB4208-1993      | Housing Protection Degree (IP Code)  |
| IEC 62271-100    | High-voltage switchgear and controlgear - Part 100: Alternating-current circuit-breaker  |
| IEC 62271-102    | High-voltage switchgear and controlgear - Part 102: Alternating current disconnectors and earthing switches (2003)                                       |
| IEC 62271-105    | High-voltage switchgear and controlgear - Part 105: Alternating current switch-fuse combinations for rated voltages above 1 kV up to and including 52 kV |
| IEC 62271-200    | High-voltage switchgear and controlgear - Part 105: AC metal-enclosed switchgear and controlgear for rated voltages above 1 kV up to and including 52 kV |
| IEC 60694        | Common specifications for high-voltage switchgear and controlgear standards  |
| IEC 60265-1      | High-voltage switches - Part 1: Switches for rated voltages above 1 kV and less than 52 kV   |
| IEC 60529        | Degrees of protection provided by enclosures(IP Code)DL/T 592-2006 common specifications for high-voltage switchgear and controlgear standard            |

## 6. Typical functions

A RMU of 12kV typical scheme is composed of three circuits - one cable incoming circuit, one cable feeding circuit and one combination unit outgoing circuit. The load switches on the cable incoming circuit and the cable feeding circuit can reset the circuits in time to resume power supply when isolating fault line segments. The load switch and fuse of the combination unit protect the downstream loads, while its load switch also conducts opening-closing and isolation on the fuse and the downstream loads.

The supply circuit of the RMU is operated in open loop.

The RUM is usually energized in the forms shown in Figure 1, 2 and 3.

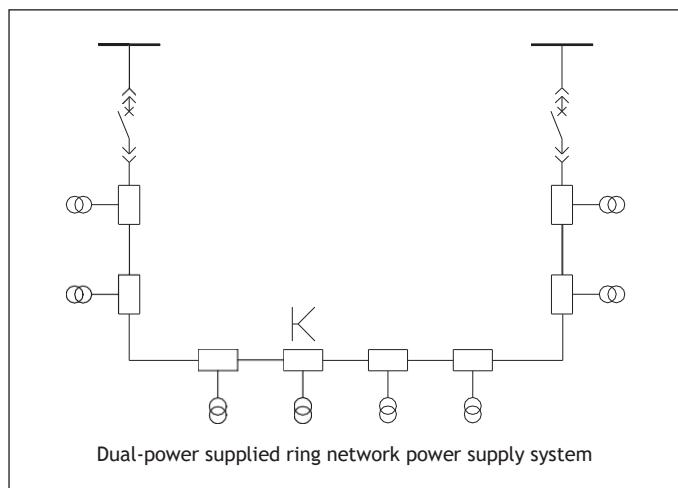


Figure 1

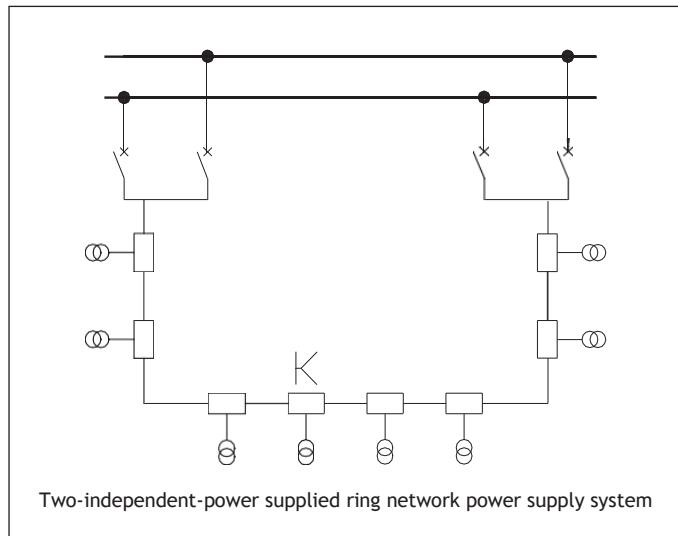


Figure 2

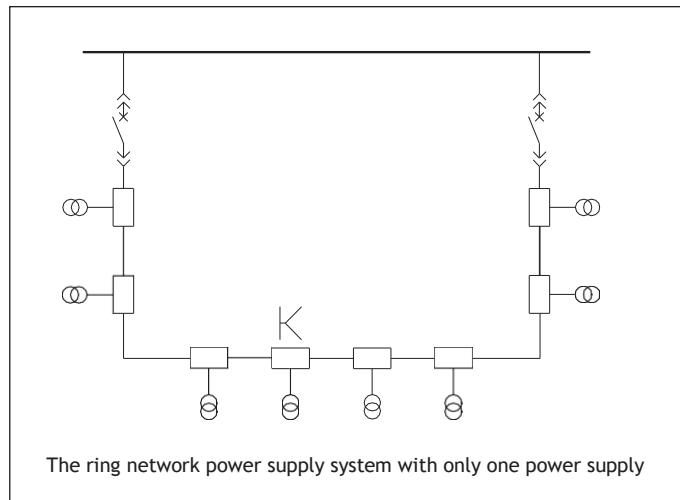


Figure 3

Note: a) “—□—” RMU      b) “K” open loop point

## 7. Typical schemes and structures (see Figure 4, 5 and 6)

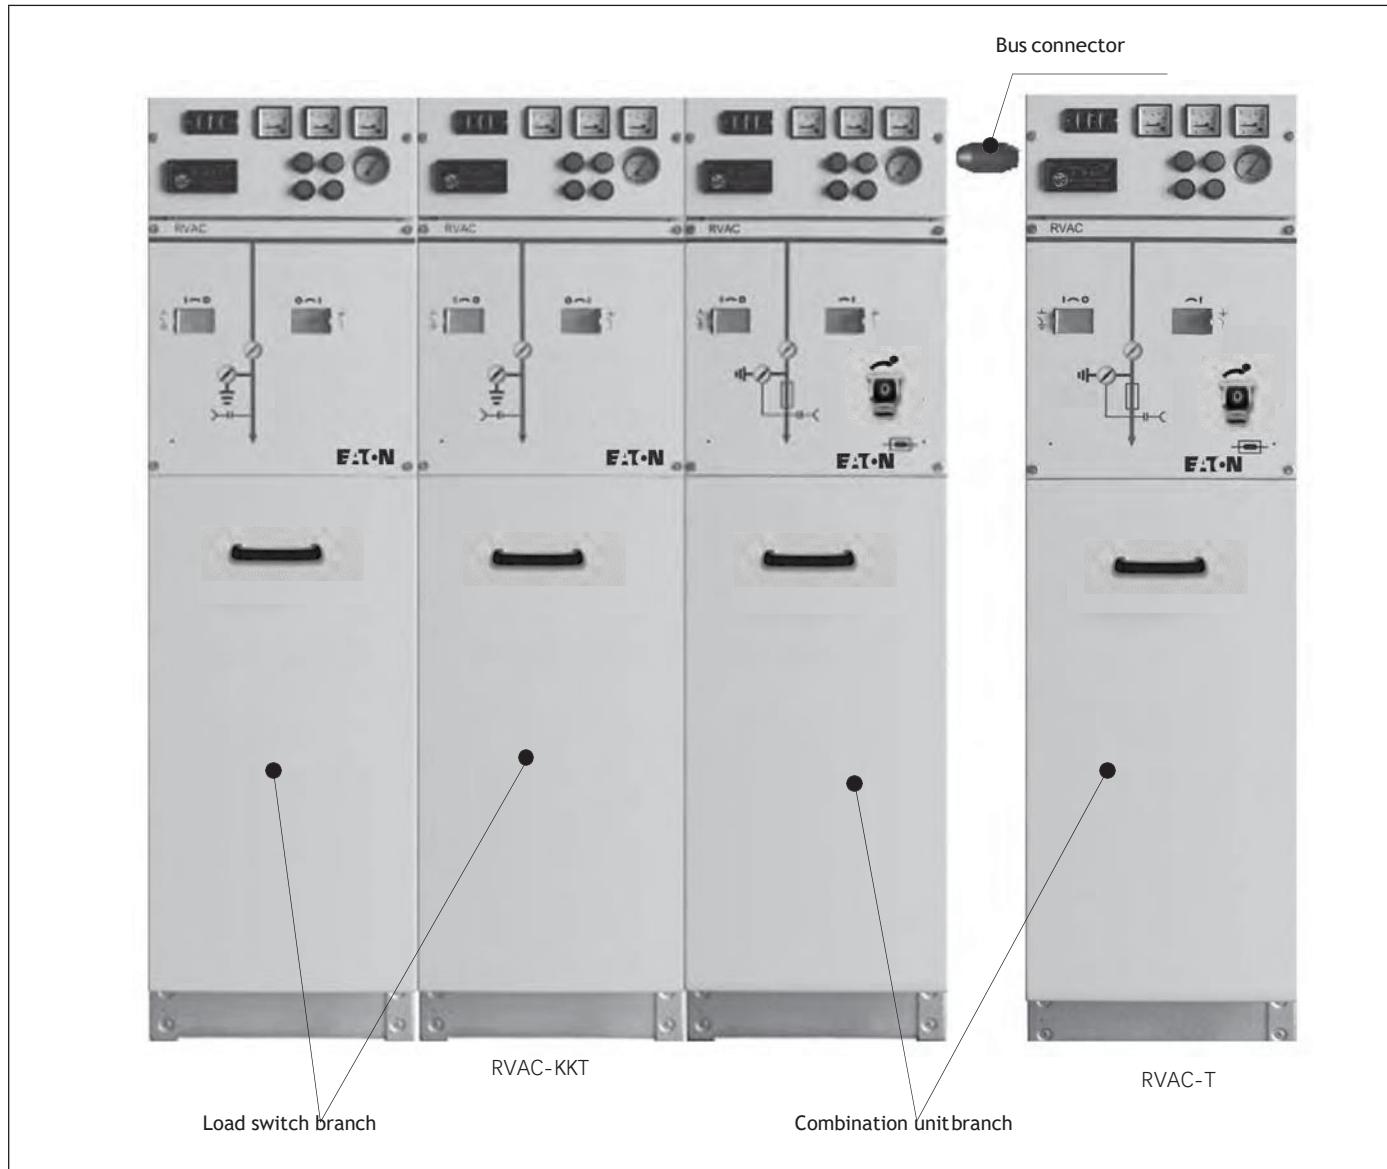


Figure 4 RMU structure diagram

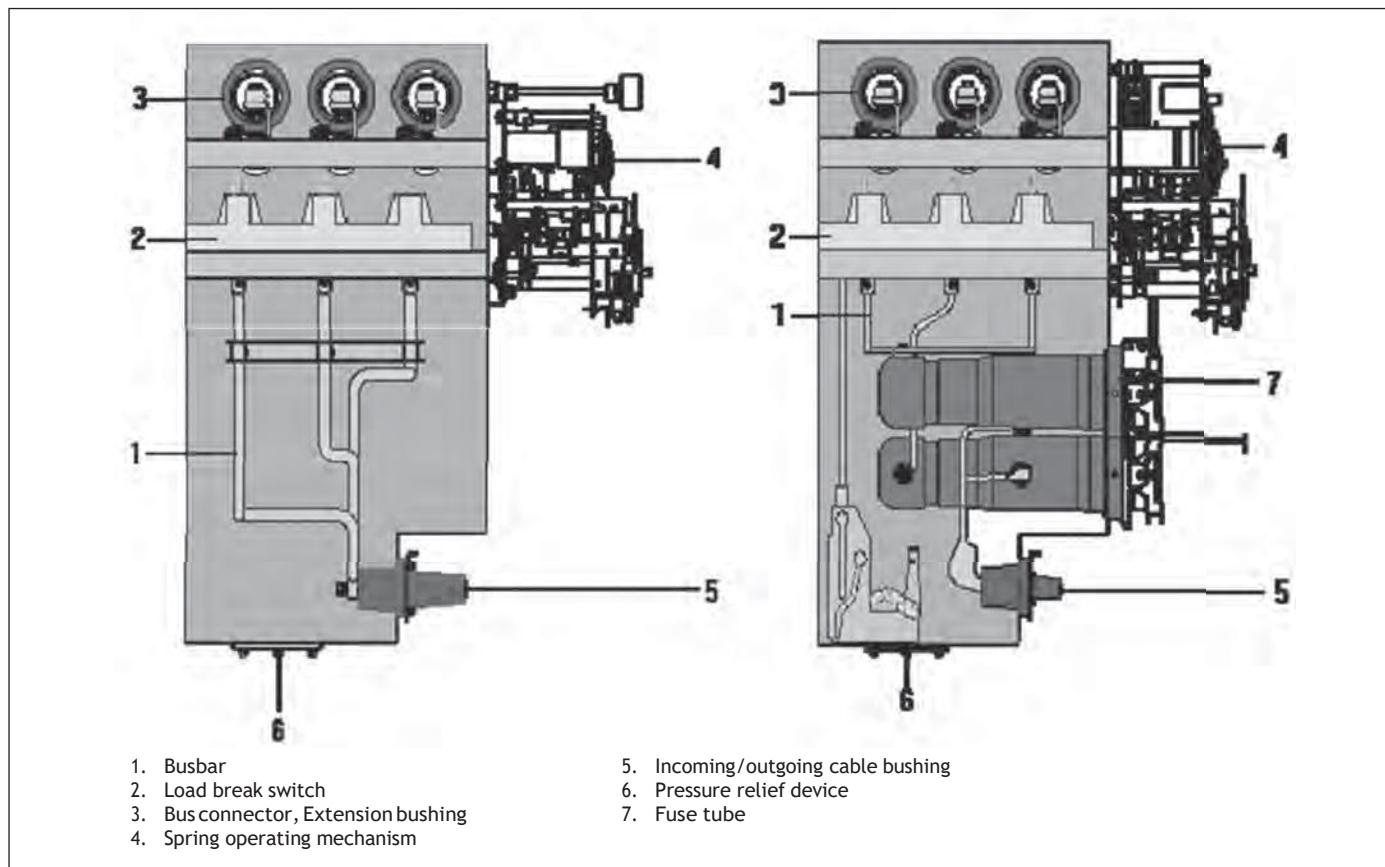


Figure 5 Sealed enclosure housing cross-section drawing

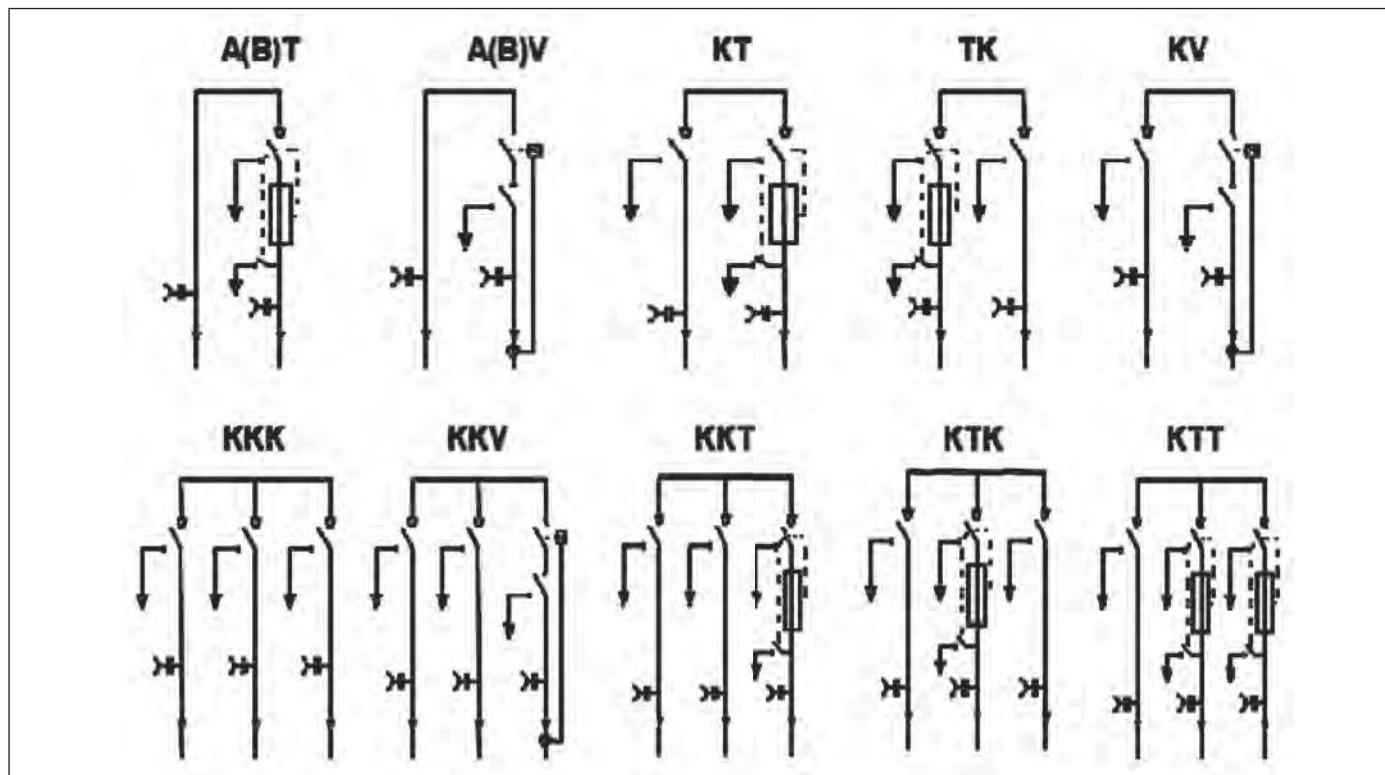


Figure 6-1 Basic schemes

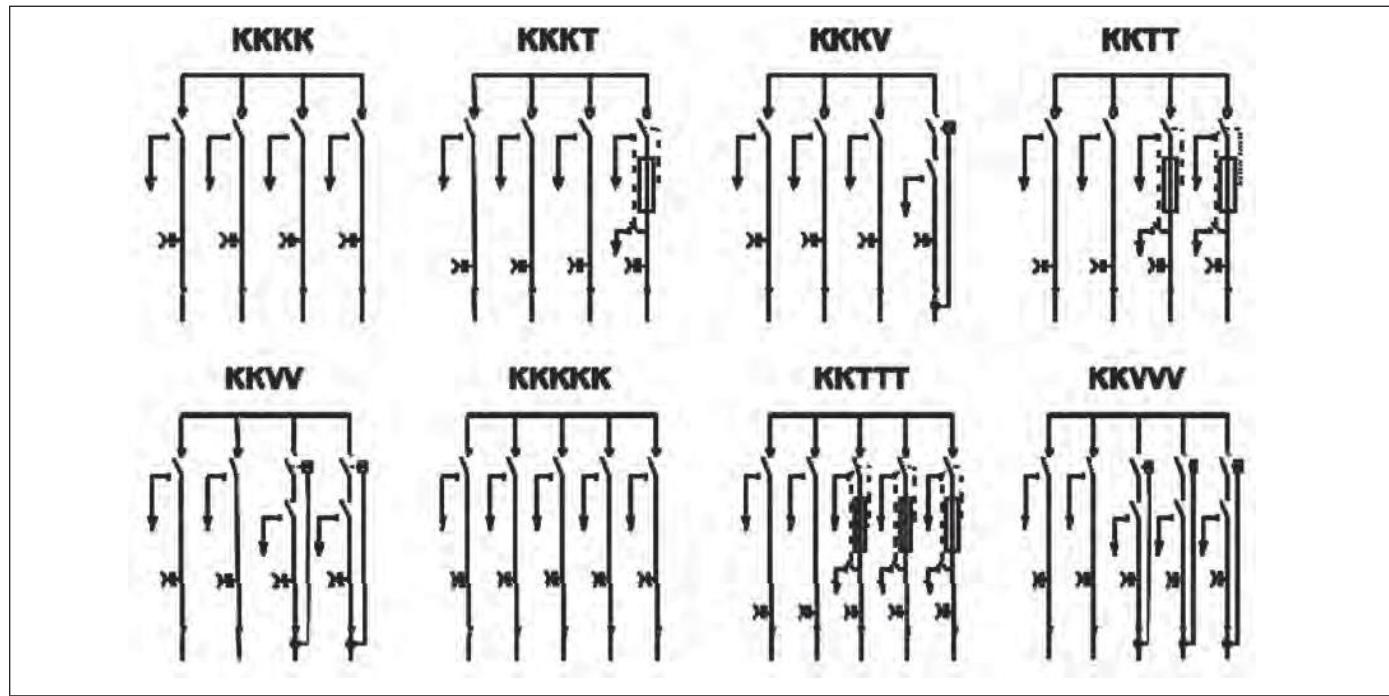


Figure 6-2 Basic schemes

## 7.1. Overall structure

The typical scheme is a one/in-two/out three-section common enclosure RMU, including one incoming, one ring feeder and one ring outgoing.

The layout of the typical scheme is shown in **Figure 4** (RVAC-KKT).

The overall structure is composed of two major parts, the gas-filled sealed housing part and the non-gas-filled part such as the control compartment, cable compartment, frame, and pressure relief channel. The high voltage circuit is within the gas-filled sealed housing, and the mechanism compartment is on the top front, while the pressure relief channel is on the bottom front. Fully shielding cable terminals are used for incoming and outgoing lines.

## 7.2. Component structure

### 7.2.1. Sealed housing

The sealed enclosure housing is made of high-quality stainless steel plates, using fully enclosed welding method and SF6 gas, with the rated pressure of 0.03 MPa. During the whole running life, safe operations can be maintained without the need to refill the gas. After assembling, the gas-filled housing can not be drilled nor welded.

### 7.2.2. Three-position Load switch

The three-position load switch is installed inside the gas-filled housing, with its operating mechanism installed inside the control compartment. The three-position load switch offers closing, opening and grounding positions. The three-position load switch is in the opening position when the knife is in the middle position. The three-position load switch is in the closing position and ground position separately when the knife is in the two-limit positions. The load switch side and the ground switch side of the three-position load switch are equipped with clear and reliable mechanical opening/closing indicator (see **Figure 7**).

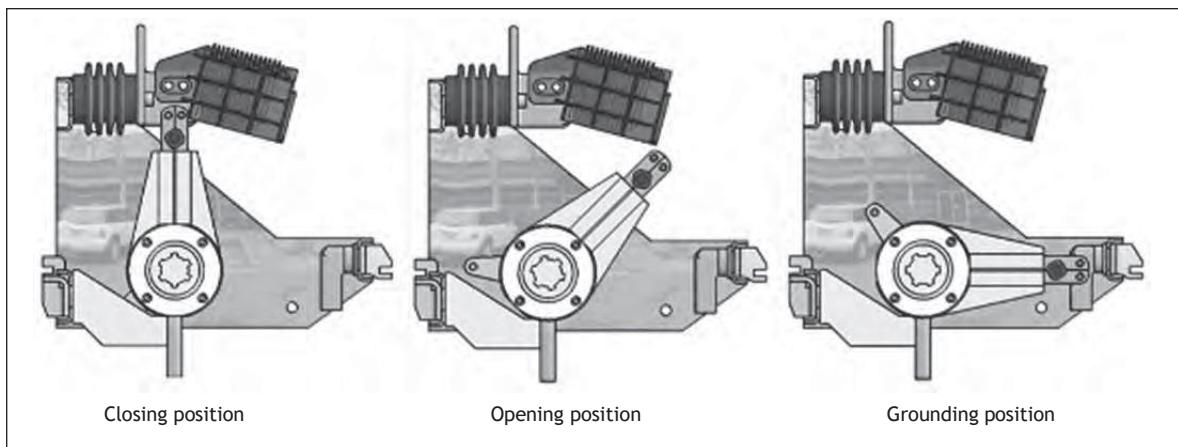


Figure 7 3-position opening/closing position indication

#### 7.2.3. Fuse ground switch

The combination unit branch circuit (load switch + current limiting fuse) is equipped with a fuse ground switch for linkage operations with the three-position load switch, offering reliable grounding to the fuse outgoing side. When the load switch is in closing/opening operation, the fuse ground switch basically remains non-operating. When the three-position load switch is in ground position, the fuse ground switch makes reliable contact with the fixed contact base at the fuse outgoing side, to ensure the fuse outgoing side is reliably grounded.

#### 7.2.4. Fuse

The fuse and the load switch constitute the transformer protection circuit. Highly quickbreak current-limiting fuse is installed inside the epoxy casting insulation housing. In the case of a short circuit, after the fuse is blown out, the striker will be ejected to open the load switch, enabling the fault line to be removed.

#### 7.2.5. Frame

The frame (the housing except the sealing enclosure) is the basic body of all the parts and components, to support and secure the sealing enclosure. The frame uses aluminum-zinc plates formed with multiple bendings, to be connected with high strength bolts, nuts (Level 8.8) and rivets. The frame can be divided into three main compartments: the control compartment, cable compartment and pressure relief channel. There are a mechanism, a fuse holder and a secondary circuit inside the control compartment. The cable compartment contains a cable, its holder, and the ground bus bar, with optional current transformer as needed. The pressure relief channel is located behind the cable compartment. On the front is located a pressure meter, a main wiring mimic diagram, a voltage presence display, an operating hole and operation buttons, a nameplate, a mechanism compartment door, and a cable compartment door.

#### 7.2.6. Mechanisms and their mechanical interlock


The three-position load switch is equipped with a spring operating mechanism, offering reliable mechanical interlocking. The load switch must be operated on according to specified operating procedures.

Interlocking conditions are as follows:

- a. Only when the load switch is moved to the opening position, the ground switch can be closed;
- b. Only when the ground switch is moved to the opening position, the load switch can be closed;
- c. Only when the ground switch is moved to the ground position, the cable compartment door can be opened;
- d. Only after the cable compartment door is closed, the ground switch can be opened.

### 7.2.7. Simple and reliable operating interface

The operating mechanism has position indicator and mechanical interlocking devices, with optional auxiliary contact, opening coil, and electrical operating device, as shown in **Figure 8**.

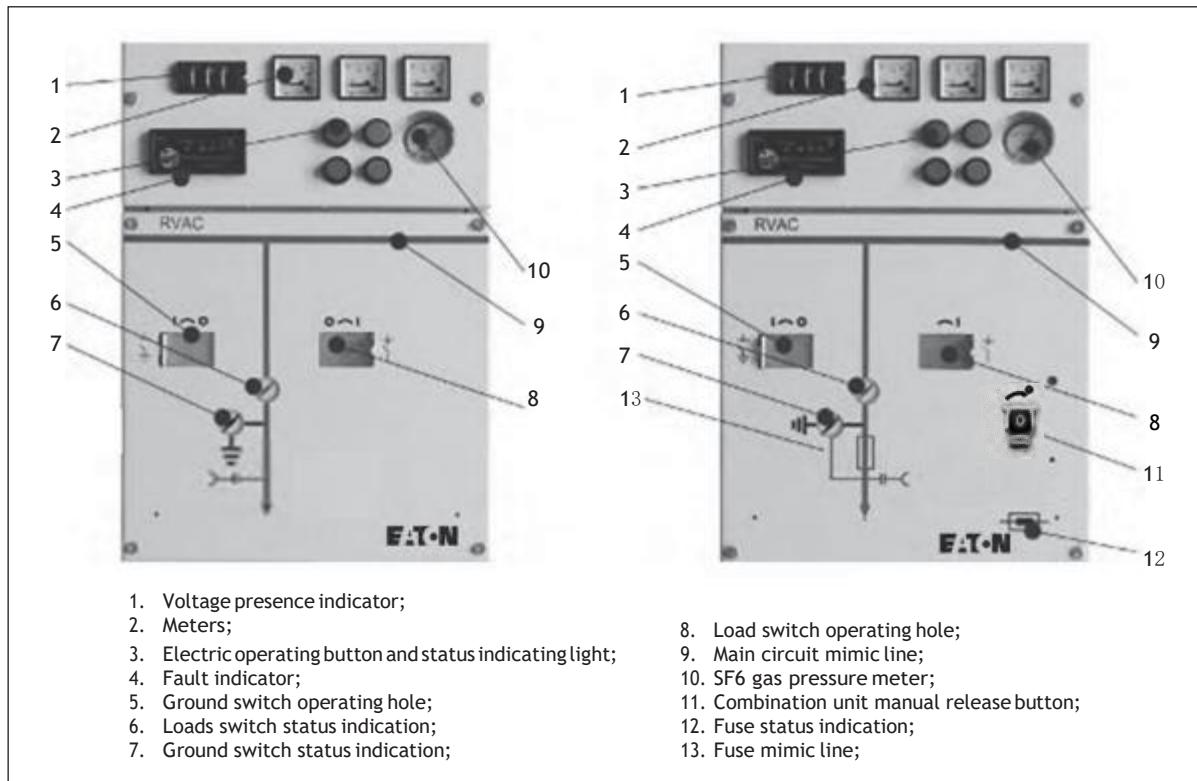

**Figure 8**

### 7.2.8. Fuse Tube

The fuse tube mainly includes two parts: epoxy insulating tube and locking plug, both of which are used to install and secure the fuse. The epoxy insulating tube is installed on the sealed housing, itself offering gas sealing feature to ensure the sealing performance of the gas-filled housing. The fuse is secured on the locking plug with screws, offering reliable insulation with close cooperation of the silicone rubber locking plug and the epoxy insulating tube.

### 7.2.9. Pressure relief device

An explosion-proof sheet is equipped at the bottom of the sealed enclosure housing. In the case of internal arcing fault, the high pressure gas inside the housing can explode this sheet away to release the pressure. Meanwhile, SF<sub>6</sub> gas will be released into the ditch through the pressure relief channel to ensure the safety of the operators. The pressure relief device is shown in **Figure 9**.

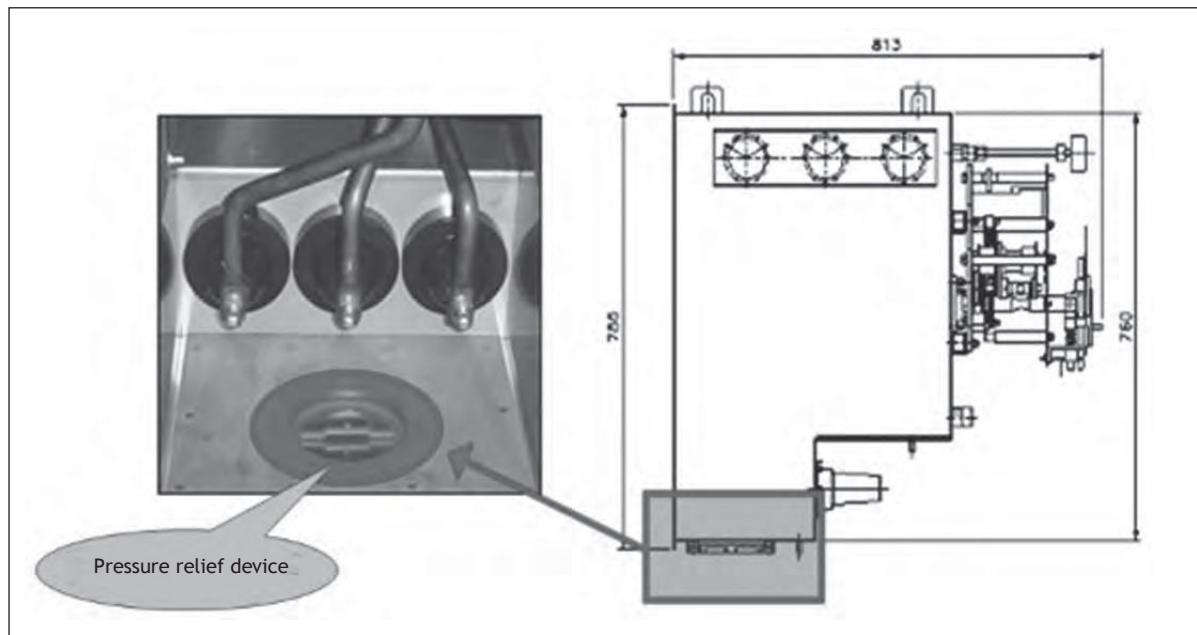


Figure 9

### 7.2.10. Ground circuit

The main grounding copper bar is supplied individually inside the cable compartment, throughout the whole arrangement, for use by directly grounded assemblies. The ground contact base of the three-position load switch is connected with the main ground copper bar with a copper bar, to constitute a ground circuit to make the whole cabinet in a well grounding status, and ensure the safety of the operators.

## Chapter 2 Transport, handling, inspection and storage

### 1. Transport and handling

- 1.1. The switchgear must be transported under the conditions that the load switch is in “OFF” position, with its charging device in “energy-releasing” state and the ground switch in “closed” state.
- 1.2. The outer packing of the switchgear shall have anti-shock, moisture-proof and dust-proof performance, and be adaptable to railway and highway transportation.
- 1.3. In the case of handling by hand-push type forklift or by freight forklift, the switchgear should be put onto the transportation pallet (see **Figure 10.1**). In the case of crane handling, the lifting hook of the crane should be hooked into the two lugs on the top of the switchgear. The angle between the lifting rope and the top of the cabinet shall exceed 45° (the angle between the lifting rope and the plumb line shall not exceed 45°), so as to avoid any deformation to the cabinet or the lug (see **Figure 10.2**).

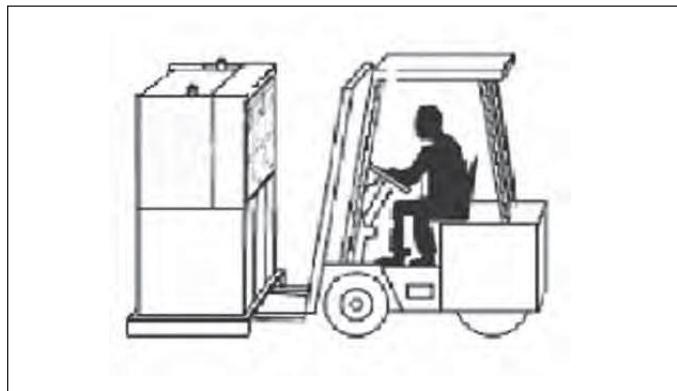


Figure 10.1 Forklift handling example

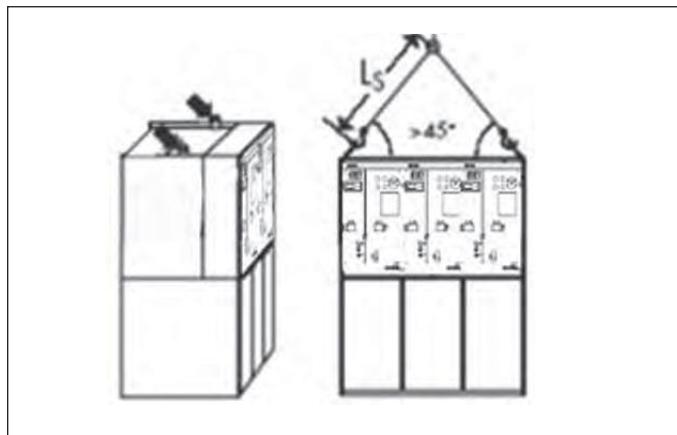


Figure 10.2 Crane handling example

1.4. During loading and unloading, the switchgear shall be handled according to the storage and transport indication mark on the package, to avoid equipment damages. In general, the switchgear should be moved vertically, to prevent from tilting or turning over.

1.5. In the case of any damages found on the switchgear after long-distance transportation, notify the cargo division immediately to have the damage accidents identified.

### 2. Inspection and storage

#### 2.1. Visual inspection

Users shall make open-box inspections in a timely manner after receiving the goods, to check the equipment for any damages or deformation during transportation.

#### 2.2. SF6 gas pressure inspection

When the product is delivered from the factory, SF6 gas has been filled, with the gas relative pressure of 0.03 MPa. During on-site inspection, the gas density meter will indicate whether the pressure of the gas is normal (normal when the pointer points to the green area, and abnormal when pointing to the red areas).



#### △CAUTION

**IN THE CASE OF ABNORMAL GAS PRESSURE, NOTIFY THE AFTER-SALES SERVICE OF COOPER ELECTRIC IN A TIMELY MANNER FOR DULY AND PROPER HANDLING.**

#### 2.3. Accessory inspection

After unpacking the package, please check whether the equipment's primary scheme conforms to the requirements of the order, and whether the accessories are complete, such as the equipment's factory data, special opening tools, and spare parts. In the case of any errors, please contact the After-sales Service of Cooper Electric in a timely manner.

#### 2.4. Storage

If the equipment can not be installed in time and has to be stored for a period of time, use the original packaging materials to properly pack the equipment after open-case inspections, and store the equipment in a dry and clean place, to avoid any mechanical damages to the equipment.

#### △CAUTION

**CHECK THE WEIGHT OF THE SWITCHGEAR. DO NOT USE WORN OUT AND DAMAGED STEEL ROPES OR LIFTING RINGS. DO NOT USE THE LIFTING EQUIPMENT WITH THE LIFTING CAPACITY LESS THAN THE WEIGHT SHOWN ON THE NAMEPLATE OF THE SWITCHGEAR.**

## Chapter 3 Installation

### △ CAUTION

**THE PRODUCT SHALL BE INSTALLED BY PROPERLY TRAINED PROFESSIONALS OR UNDER THE INSTRUCTION OF PROFESSIONALS.**

#### 1. RMU dimensions

RAVC-K, RVAC-T and RVAC-V are taken as examples for RMU dimensions. See Figure 11.

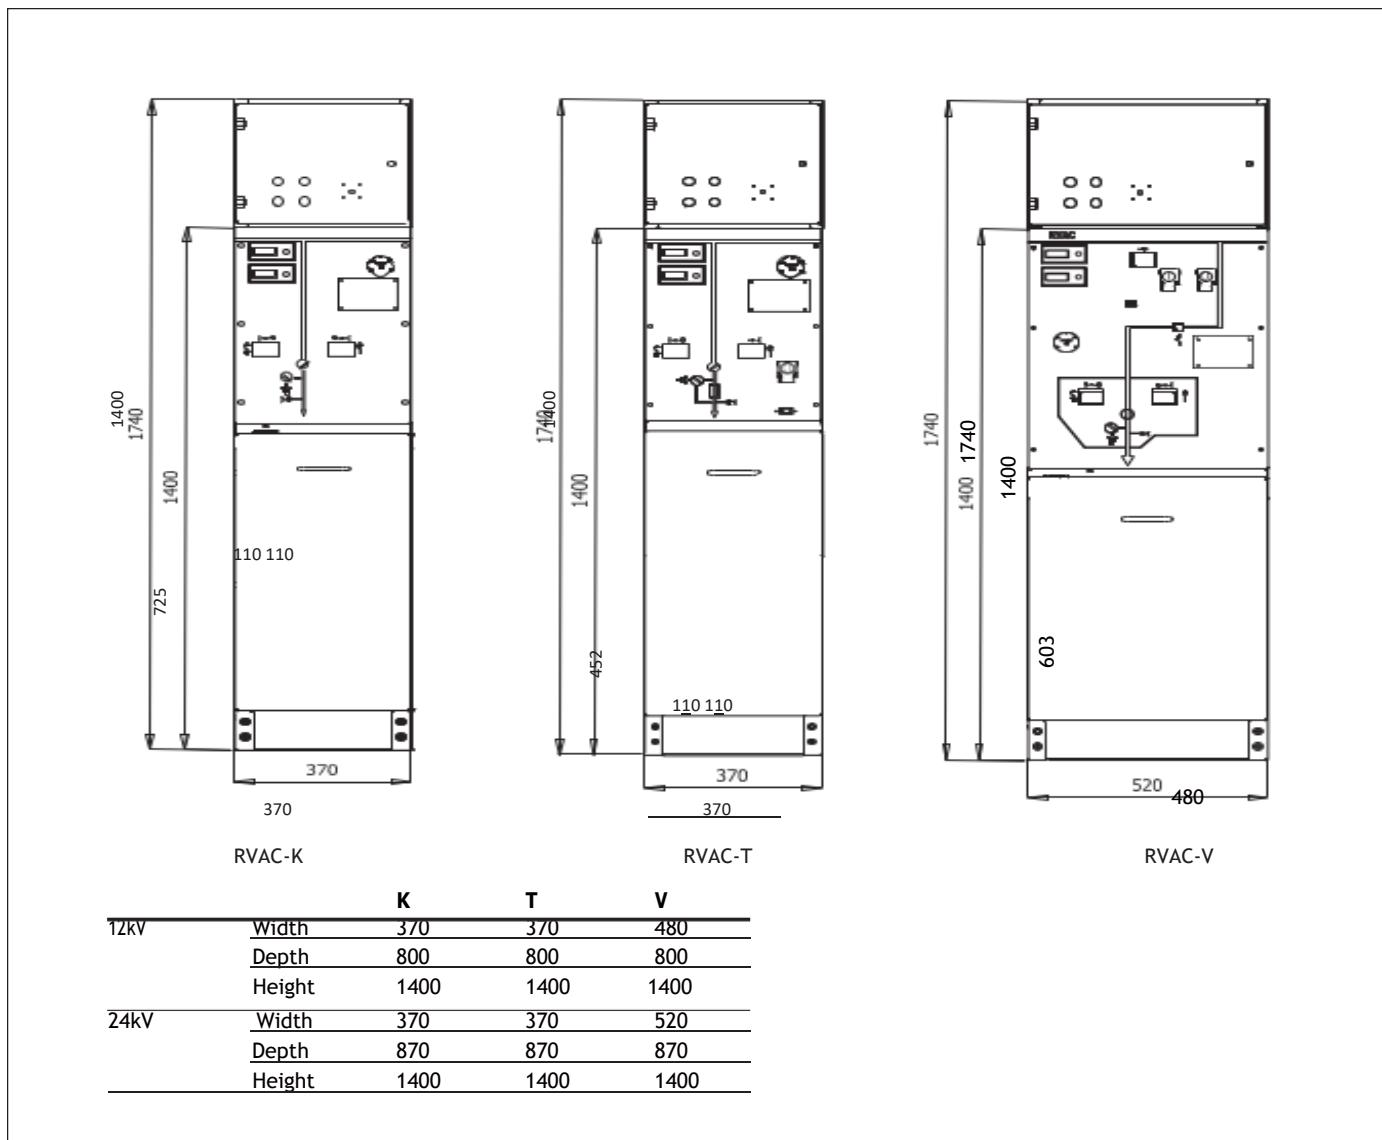


Figure 11

#### 2. Base form

2.1. The RMU installation base shall be constructed in accordance with relevant regulations in Technical Specifications for Electric Power Construction and Acceptance Inspection.

2.2. The RMU's installation base is generally poured with concrete twice. For the first time, concrete the installation base of the RMU's installation elements including the angle steel, square steel and channel steel. For the second time, concrete the ground supplement layer, with a common thickness of 60 mm. When pouring concrete to the supplement layer, the height of the concrete should be 1 ~ 3 mm lower than the element surface.

2.3. For the dimensions of the RMU installation bases, see **Figure 12.1** and **Figure 12.2** (12kV cabinet depth 800mm, 24kV cabinet depth is 870mm).

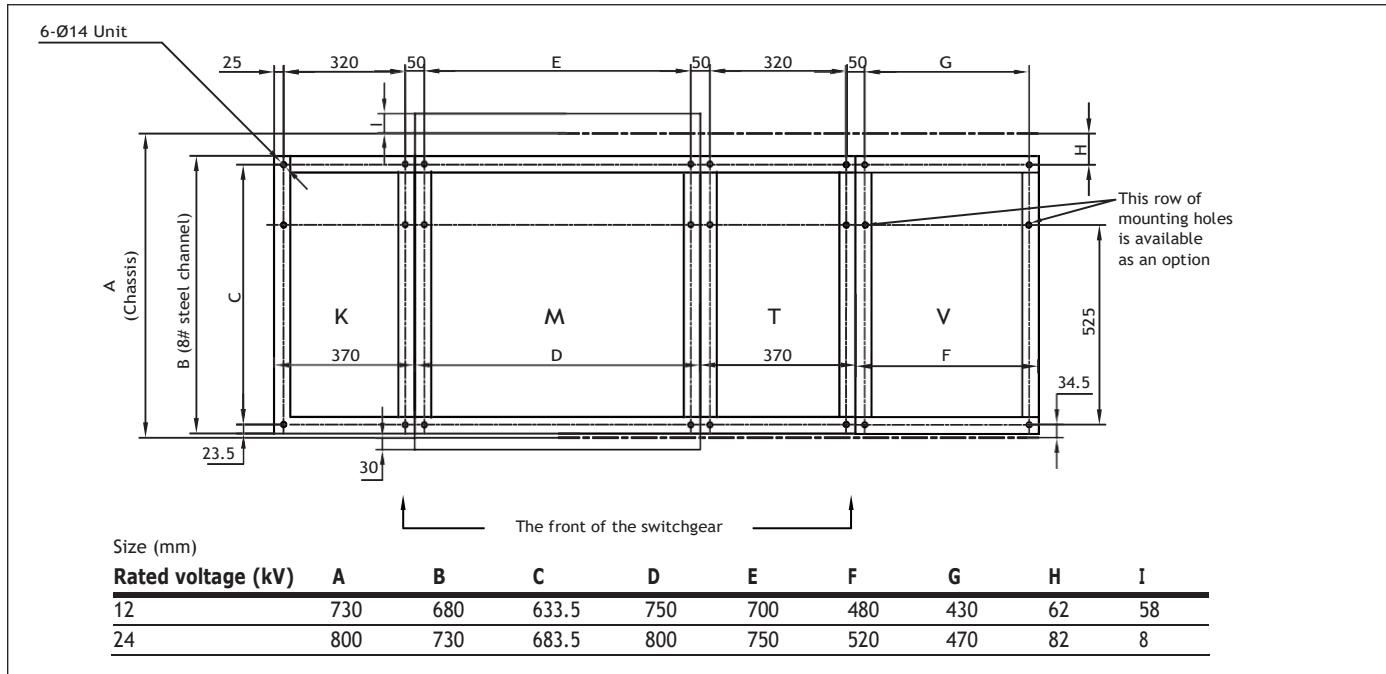


Figure 12.1 RMU indoor installation base dimension

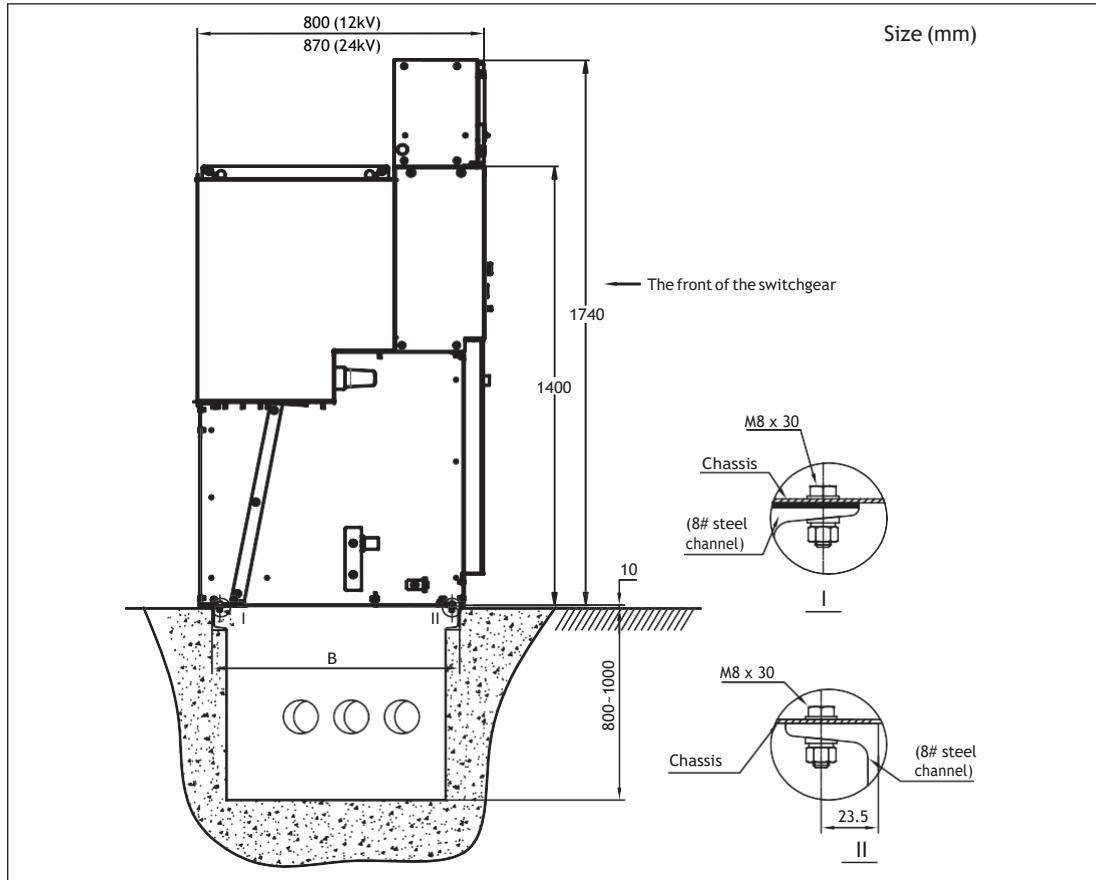


Figure 12.2 The frame installation base at the RMU side

2.4. To ensure the installation quality of the basic elements, the levelness of the framework installation requires the tolerance of 1 square meter shall be less than 3 mm.

### 3. RMU fixation

3.1. The bottom of the switchgear is linked to the metal base frame with bolts, enabling the switchgear to be fixed on the frame (the cabinet shall have 4 connection joint surfaces with the frame). Use M20 connecting screws and bolts, with the torque of 40 + 4 Nm.

#### **⚠WARNING**

**THE CHARGING DEVICE SHALL NOT BE IN CHARGING STATE DURING THE INSTALLATION AND CONNECTION OF THE RMU. OTHERWISE, THIS MAY CAUSE PERSONAL INJURY.**

3.2. Check all the fastening bolts for looseness, and all the wirings for reliability.

3.3. Check whether the 3-position load switch mechanism can be operated flexibly, whether the load switch can open and close freely; check for any abnormality. Check whether the interlocks are reliable.

### 4. RMU grounding

The grounding bar of the RMU must be connected to the grounding grid of the site. The grounding position of the RMU is inside the right side frame of the cabinet chassis. See **Figure 13**. Use M12 connecting screws or bolts, with the torque of 70 ±7Nm. The grounding wire is not included in the supply scope.

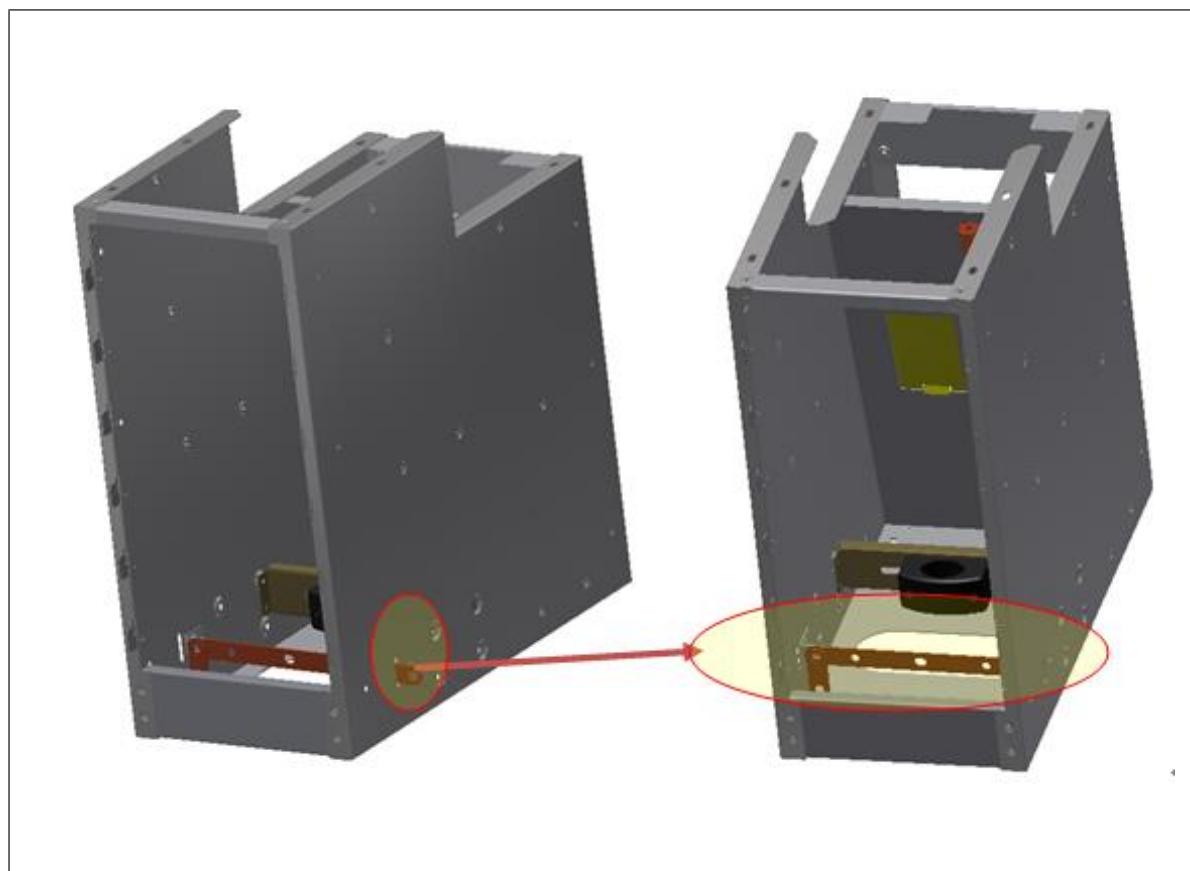


Figure 13 Grounding position diagram

## 5. Cable installation

### 5.1. Preparation prior to cable placing

Remove the cable compartment door in the procedures shown below (for the operating method of the switch, see Chapter 4)

- a. Operate and confirm the ground switch is in the closed state (see **Figure 14.1**);
- b. Remove the cable compartment door, and open the cable compartment (see **Figure 14.2**);

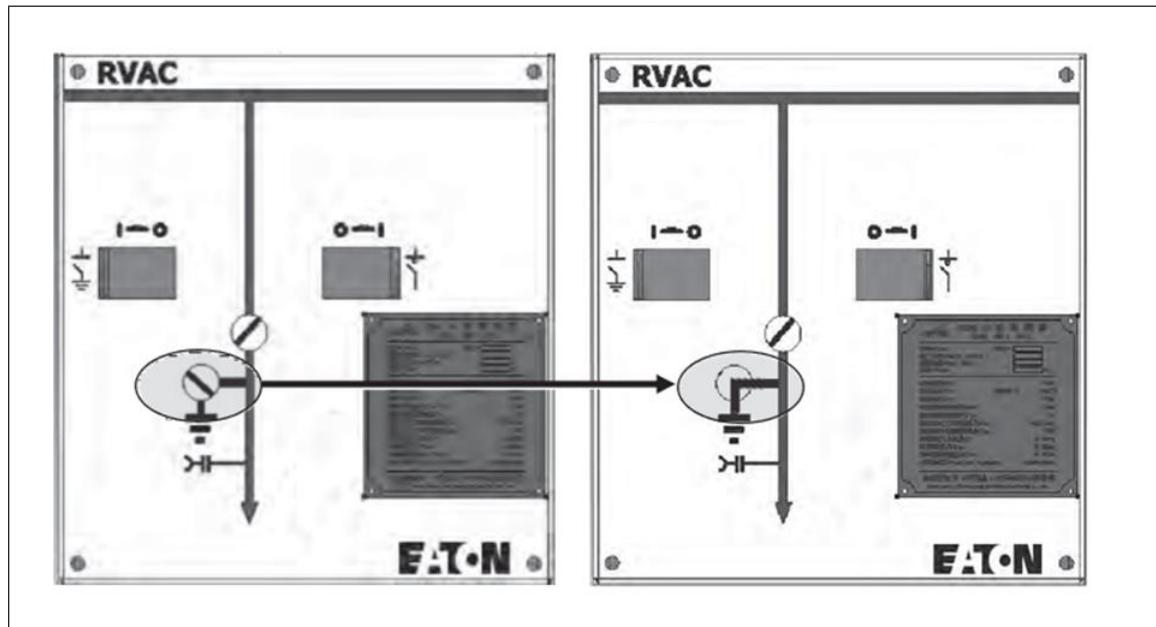


Figure 14.1 Ground switch status indication

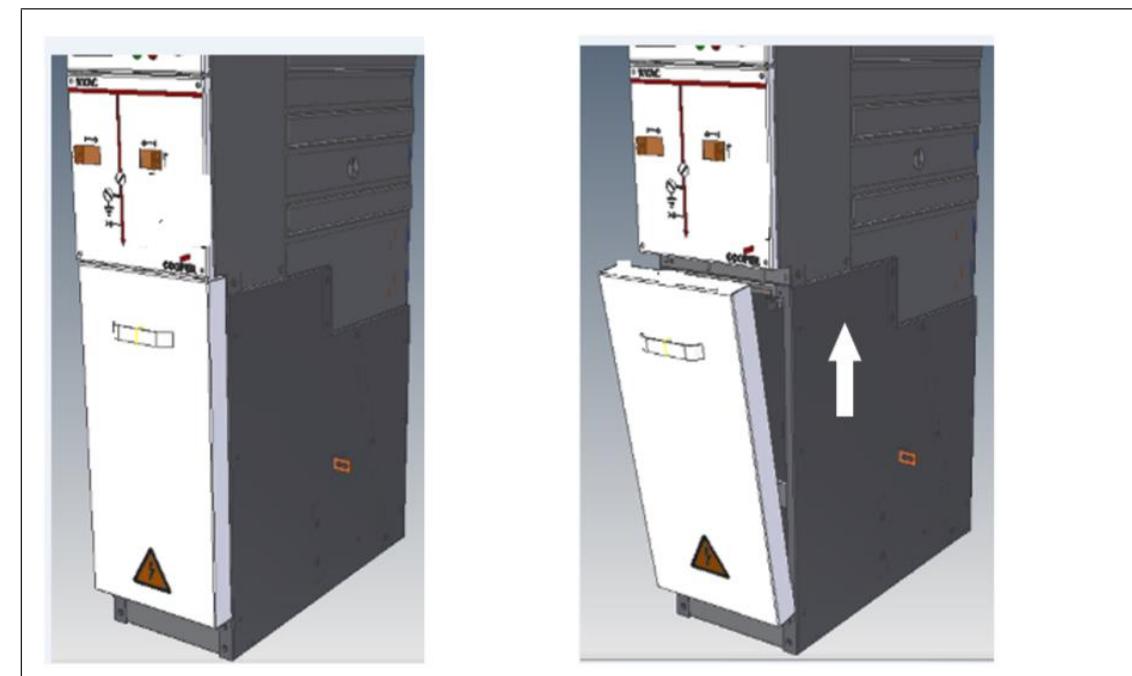


Figure 14.2 Removal of the cable compartment door

## 5.2. Cable connection

The cable terminal head adopts prefabricated silicone rubber, with well-designed internal stress cone and shielding, properly solving electric field concentration issues at the cutting place of the outer screen and at the high voltage end. There is a semi-conductive layer outside the product, allowing the live parts to be fully sealed, fully insulated and completely screened, thus ensuring reliable operations of the ring main unit. The load switch casing is 725 mm away from the ground, while the combination unit cabinet casing is 452 mm away from the ground, well protected by the cable compartment door. Passing through the cable trench into the cabinet, the cable are cut off after the length is measured. The connections of relevant parts and the making of cable heads shall be considered as far as the length is concerned.

---

### ⚠ WARNING

PLEASE READ CAREFULLY THE INSTALLATION INSTRUCTION MANUAL OF THE CABLE ACCESSORIES. ONLY PROFESSIONAL INSTALLATION PERSONNEL ARE ALLOWED TO MAKE THE ACCESSORY STRICTLY ACCORDING TO ITS REQUIREMENTS. FAILURE TO DO SO WILL SEVERELY AFFECT THE NORMAL OPERATION OF THE EQUIPMENT.


---

---

### ⚠ WARNING

THE INSTALLATION OF THE CABLE BRACKETS AND THE FIXATION OF THE CABLE SHALL NOT BRING ADDITIONAL FORCES TO THE INSULATING CASING.

---

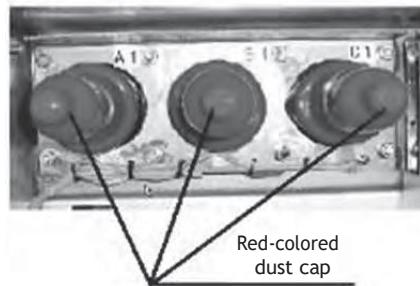

---

### ⚠ WARNING

RED-COLORED PROTECTIVE DUST CAP IS FORBIDDEN TO BE PUT INTO OPERATION, AND CAN NOT REPLACE THE INSULATION COVER FOR USE.

---

## 6. Fuse installation (equipped with the fuse's transformer feeder unit)

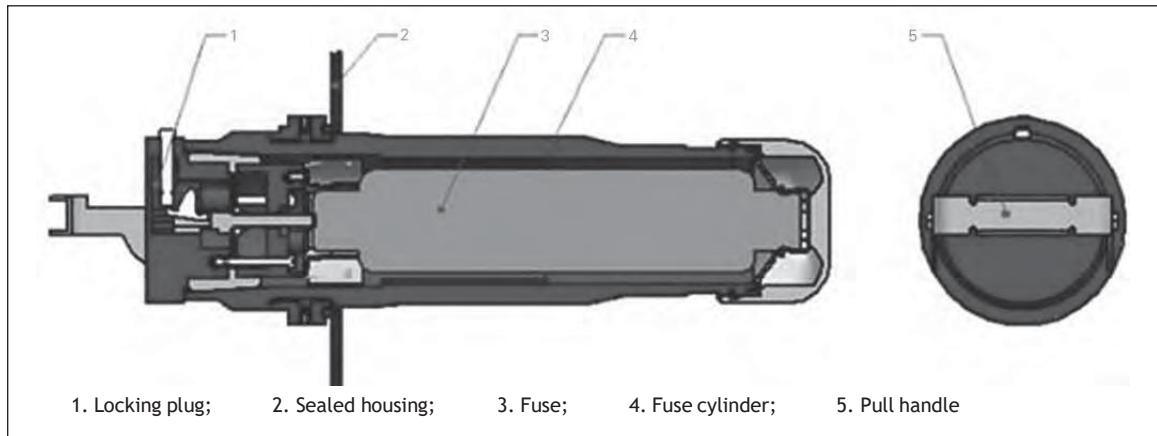


Figure 15 Fuse cylinder structure drawing

The fuse shall be installed and replaced by properly trained professionals.

Before the RMU is put into operation, properly install the chosen fuse as described in the following procedures:

- Open the combination unit branch load switch;
- Move the 3-position load switch to the ground position, to ensure that both ends of the fuse are grounded;
- As shown in **Figure 16**, move the handle from the vertical place to horizontal place, maintain and withdraw the locking plug horizontally. Handle with care, to avoid any damage to the fuse cylinder;

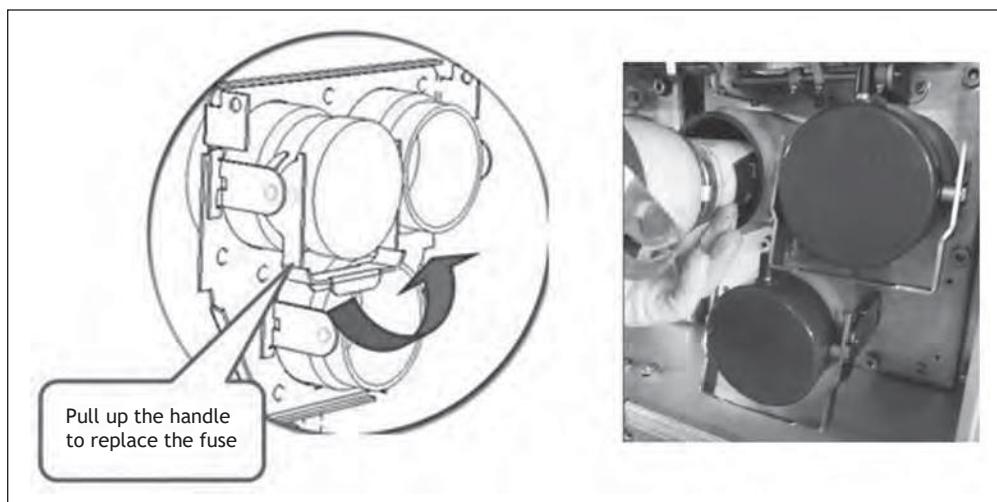


Figure 16 Fuse cylinder operation example

- Check the silicone rubber sleeves for any damage, and the contact button on the locking plug for any permanent deformation;
- Install a new fuse, ensuring a dimension of 2 to 4mm as shown in **Figure 17**. Check whether the installation direction is correct, because the fuse's striker pushes the load switch to open after the fuse is blown. Therefore, the striking end of the fuse (small end) must be outward;

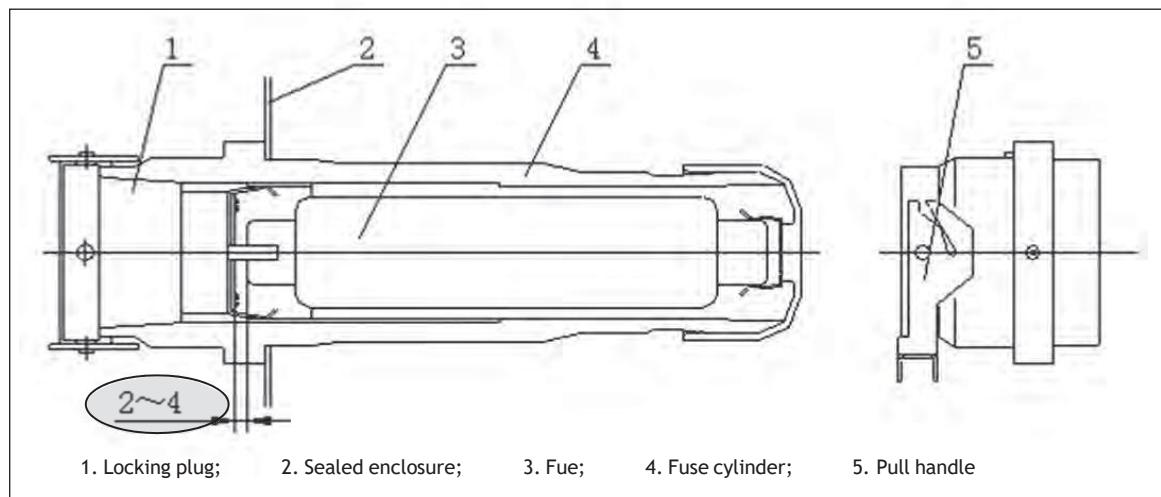


Figure 17 Fuse cylinder structure diagram

- f. Before inserting the fuse into the insulation cylinder, clear and clean the silicon rubber surface with alcohol cotton paper. Then apply silicon grease evenly on the surface of the silicon rubber special grease smearing
- g. As shown in **Figure 18**, insert the fuse into the insulation cylinder horizontally, ensuring the inner side of the fuse has good contact with the contact button inside the insulation cylinder. Push the locking plug slightly to make the handle's notch clutch onto the pin of the cabinet. Then press the handle from the horizontal position to vertical position, to complete the installation of the fuse.

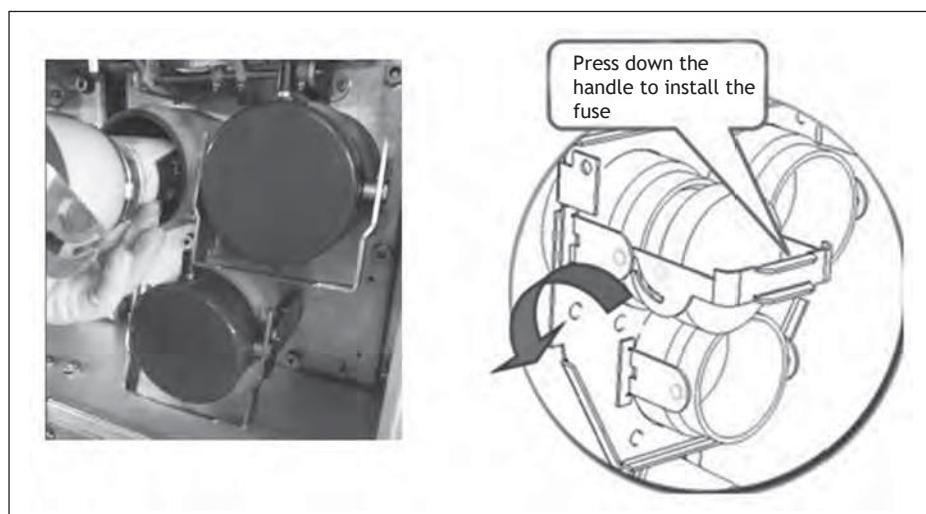


Figure 18 Fuse cylinder operation example

During operation, the fuse must be replaced after blown out. Be careful and cautious during the replacement of the fuse. For the consideration of safety, wait at least for 10 minutes after the action of the fuse, the circuit is isolated by the load switch, the ground switch is closed, and both ends of the fuse are grounded. Then replace the fuse as follows:

- a. Make sure that the fuse has blown out, and the load switch has opened;
- b. Move the 3-position load switch to the ground position, ensuring that both ends of the fuse are grounded;

- c. As shown in **Figure 16**, move the handle from the vertical position to horizontal position, and maintain and withdraw the locking plug and the fuse horizontally. Handle with care, to avoid any damage to the fuse cylinder;
- d. Check the silicone rubber sleeves for any damage, and the contact button on the locking plug for any permanent deformation;
- e. Remove the blown fuse;
- f. Insert the fuse into the insulation cylinder, clear and clean the silicon rubber surface with alcohol cotton paper. Then apply silicon grease evenly on the surface of the silicon rubber, and press down the top pin of the locking plug;
- g. Insert the fuse into the insulation cylinder horizontally, ensuring the inner side of the fuse has good contact with the contact button inside the insulation cylinder. Push the locking plug slightly to make the handle's notch clutch onto the pin of the cabinet. Then press the handle from the horizontal position to vertical position (see **Figure 18**), to complete the installation of the fuse.

---

**⚠WARNING**

**THE FUSE SHALL BE SELECTED ACCORDING TO THE FUSE SELECTION TABLE. IN THE THREE-PHASE POWER GRID, EVEN IF ONLY ONE-PHASE FUSE TAKES ACTION, ALSO REPLACE THE OTHER TWO-PHASE FUSES. WHEN REPLACING, MAKE SURE THAT THE FUSE IS COOLED!**

---

## 7. Cabinet connection and installation

Cooper series ring main units can make two different switchgears connected together with a bus connector. The process does not involve the process of SF<sub>6</sub> gas. This connector consists of silicone rubber plug-ins and contact buttons, installed between the two bus insulators (bus exit) on the side of the switchgear, with electric field distribution controlled by the semiconductor layer, with contact buttons to carry current, to make adjacent switchgear buses to connect in the electric circuit and have the joints insulated. First, insert three bus connectors into the corresponding bus insulators of one switchgear, and draw the adjacent switchgear closer to it. During closing up, the bus connector shall be aligned towards the center of the bus insulator, connect and tighten these two switchgear cabinets with bolts.


## 8. Inspection and cleaning after installation

- To check the data on the nameplate;
- To check the control circuit line and voltage;
- Gas pressure indication (red/green);
- To remove the dust on the equipment due to installation;
- To remove instructions, leaflets and data no longer needed;
- To check all the fastening pieces for looseness, and remove the tools and parts no longer needed on the installation site;
- To check the wirings on the installation site;
- To check the effectiveness of the interlocks.

## Chapter 4 Operation

### 1. Load switch cabinet

#### 1.1. Operating interface description

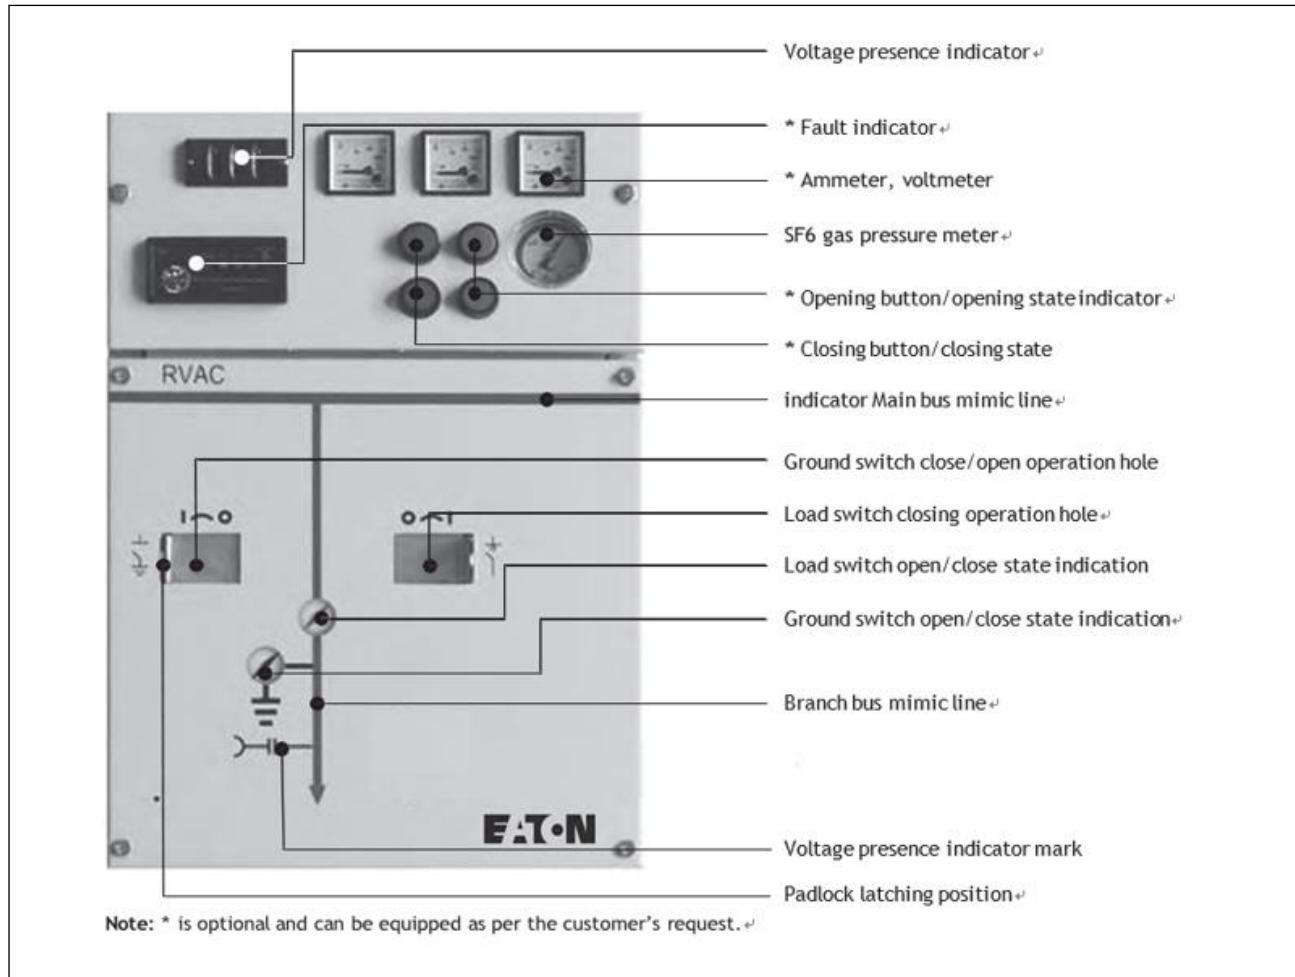

#### 1.2. Interlock description

The load switch cabinet offers the following question-and-answer mechanical interlock.

| Load switch   | Ground switch | Cable compartment door |
|---------------|---------------|------------------------|
| <b>Closed</b> | Locked        | Locked                 |
| <b>Opened</b> | Not locked    | Locked                 |
| Locked        | <b>Closed</b> | Not locked             |
| Not locked    | <b>Opened</b> | Locked                 |
| Locked        | Locked        | <b>Open</b>            |
| Locked        | Not locked    | <b>Close</b>           |

### 1.3. Operation instruction


- a). Close the cable compartment door, and unlock the operation of the ground switch;
- b). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle clockwise to open the ground switch, and pull out the operating handling after operation;
- c). Push open the load switch operating hole latching panel to the left, open the load switch operating hole, insert the handle into the load switch operating hole, rotate the handle clockwise to close the switch, and pull out the operating handling after operation;
- d). Push open the load switch operating hole latching panel to the left, open the load switch operating hole, insert the handle into the load switch operating hole, rotate the handle counter clockwise to open the switch, and pull out the operating handling after operation;
- e). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle counterclockwise to close the ground switch, and pull out the operating handling after operation;
- f). Lift up the lock catch of the interlocking device to lock the operation of the ground switch, and open the cable compartment door;

#### **⚠ WARNING**

**IT IS STRICTLY PROHIBITED TO CLOSE THE GROUND SWITCH AND OPEN THE CABLE COMPARTMENT DOOR WHEN THE CABLE HEAD IS ENERGIZED.**

## 2. Combination unit cabinet

### 2.1. Operating interface description

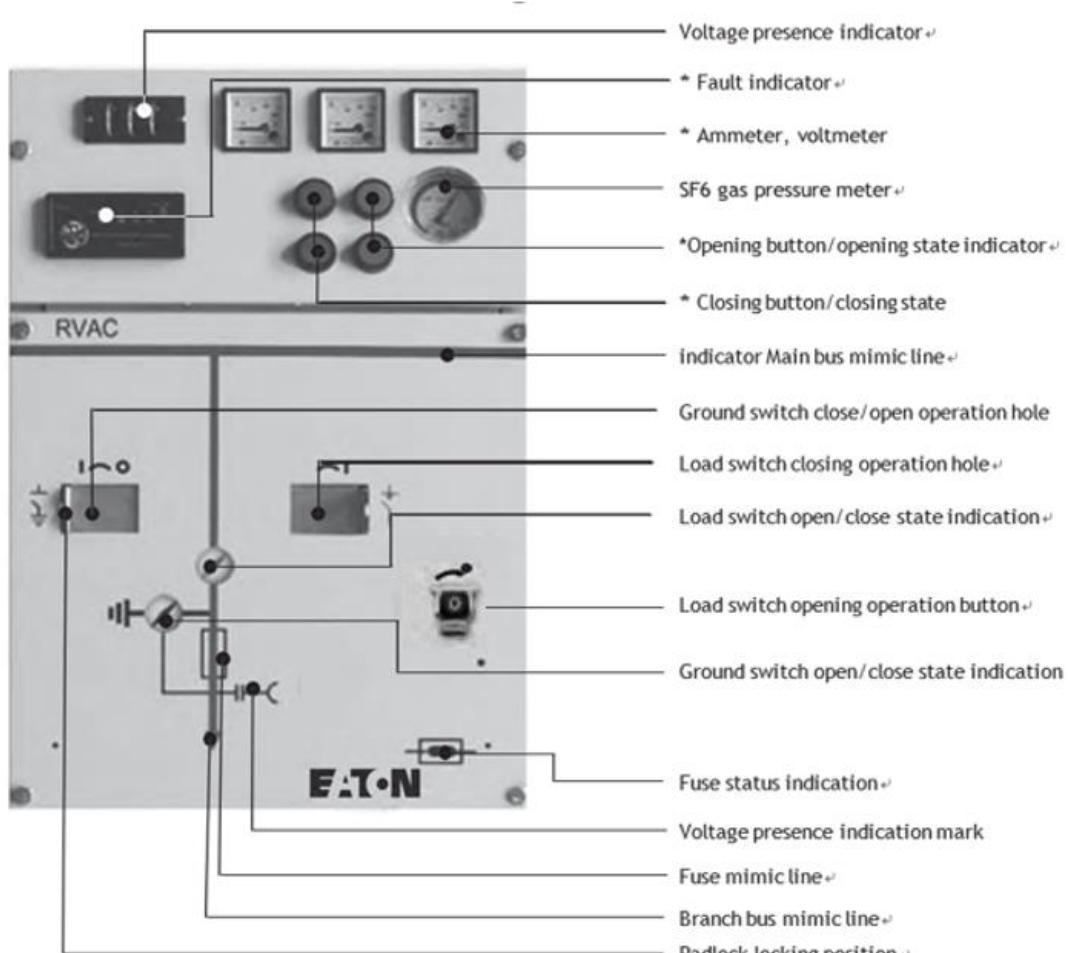

Note: \* is optional and can be equipped as per the customer's request.

## 2.2. Interlock description

The combination unit offers question-and-answer mechanical interlock.

| Load switch   | Ground switch | Fuse compartment and cable compartment door |
|---------------|---------------|---|
| <b>Closed</b> | Locked        | Locked                                      |
| <b>Opened</b> | Not locked    | Locked                                      |
| Locked        | <b>Closed</b> | Not locked                                  |
| Not locked    | <b>Opened</b> | Locked                                      |
| Locked        | Locked        | <b>Open</b>                                 |
| Locked        | Not locked    | <b>Close</b>                                |

## 2.3. Operation instruction

- a). Close the cable compartment door, and unlock the operation of the ground switch;
- b). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle clockwise to open the ground switch, and pull out the operating handling after operation;
- c). Push open the load switch operating hole latching panel to the left, open the load switch operating hole, insert the handle into the load switch operating hole, rotate the handle clockwise to close the switch, and pull out the operating handling after operation;
- d). Rotate the load switch opening button clockwise to open the load switch;
- e). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle counterclockwise to close the ground switch, and pull out the operating handling after operation;
- f). Lift up the lock catch of the interlocking device to lock the operation of the ground switch, and open the cable compartment door;
- g). Only after opening the cable compartment door, the fuse compartment can be operated. For operational details, see Chapter 3 Section 6 Fuse Installation

---


### **⚠WARNING**

**THE FUSE STATUS INDICATION SHALL BE CONFIRMED FIRST DURING OPERATION. IF THE FUSE IS IN DISCONNECTED STATE, REPLACE THE FUSE AS SOON AS POSSIBLE. IT IS FORBIDDEN TO CONDUCT CLOSING OPERATION ON THE LOAD SWITCH.**

---

### 3. Circuit breaker cabinet

#### 3.1. Operating interface description

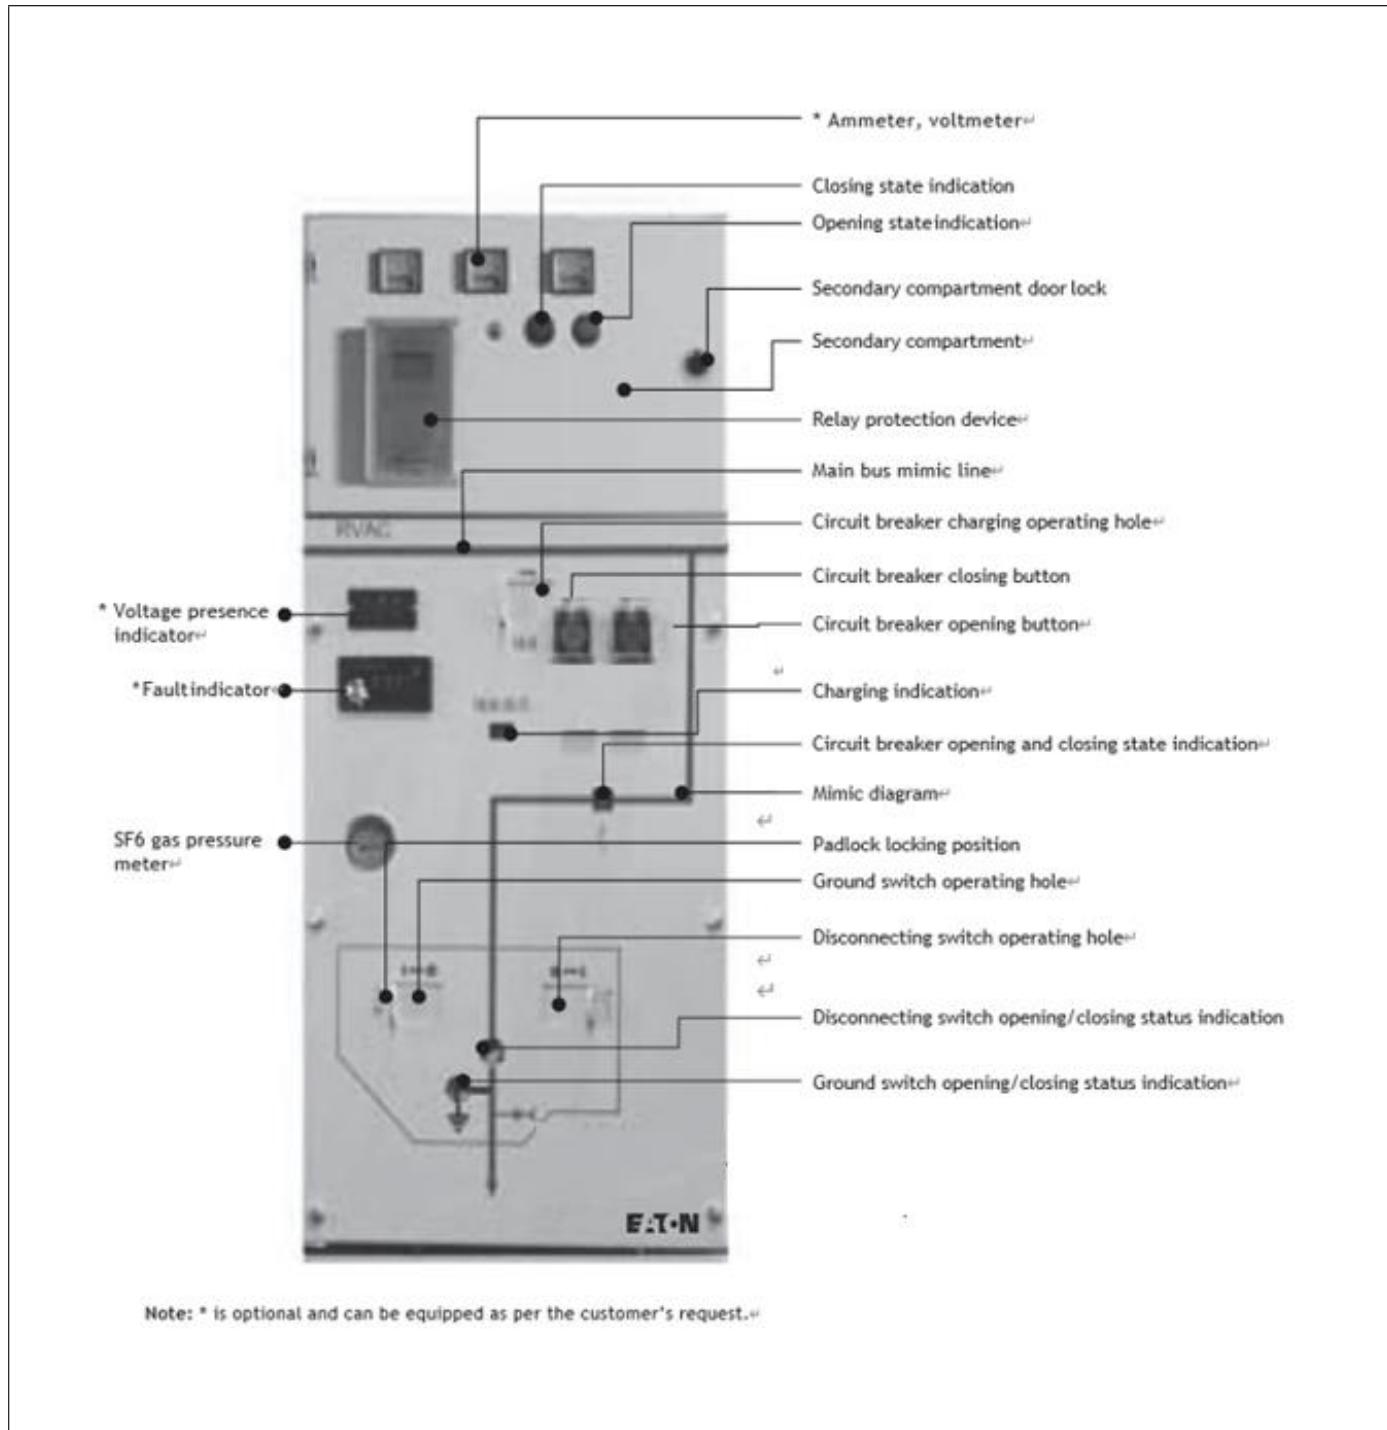

### 3.2. Interlock description

| Circuit breaker | Disconnecting switch | Ground switch  | Cable compartment door |
|-----------------|----------------------|----------------|------------------------|
| <b>Closing</b>  | Locked               | Locked         | Locked                 |
| <b>Opening</b>  | Not locked           | Locked         | Locked                 |
| Not locked      | <b>Opening</b>       | Not locked     | Locked                 |
| Not locked      | Locked               | <b>Closing</b> | Not locked             |
| Not locked      | Not locked           | <b>Closed</b>  | Locked                 |
| Not locked      | Locked               | Locked         | <b>Open</b>            |
| Not locked      | Locked               | Not locked     | <b>Close</b>           |

### 3.3. Operating instruction

- a). Close the cable compartment door, and unlock the operation of the ground switch;
- b). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle clockwise to open the ground switch, and pull out the operating handling after operation;
- c). Push open the disconnecting switch operating hole latching panel to the left, open the disconnecting switch operating hole, insert the handle into the disconnecting switch operating hole, rotate the handle clockwise to close the switch, and pull out the operating handling after operation;
- d). Push open the circuit breaker charging operation hole latching panel to the left, open the circuit breaker charging operation hole, insert the handle into the circuit breaker charging operation hole, rotate the handle clockwise to charge the circuit breaker;
- e). Open the circuit breaker closing operation button cover, press down the closing operation button to close the circuit breaker, and put back the operation button cover after operation;
- f). Open the circuit breaker opening operation button cover, press down the opening operation button to open the circuit breaker, and put back the operation button cover after operation;
- g). Push open the disconnecting switch operating hole latching panel to the left, open the disconnecting switch operating hole, insert the handle into the disconnecting switch operating hole, rotate the handle counter-clockwise to open the switch, and pull out the operating handling after operation;
- h). Push open the ground switch operating hole latching panel to the right, open the ground switch operating hole, insert the handle into the ground switch operating hole, rotate the handle counter-clockwise to close the ground switch, and pull out the operating handling after operation;
- i). Lift up the lock catch of the interlocking device to lock the operation of the ground switch, and open the cable compartment door;

#### **⚠ WARNING**

**IT IS FORBIDDEN TO CONDUCT OPENING AND CLOSING OPERATIONS ON THE DISCONNECTING SWITCH WHEN LOADED! MAKE SURE TO CONFIRM THE STATUS OF THE CIRCUIT BREAKER FIRST PRIOR TO ANY OPERATION DURING RUNNING. ONLY WHEN THE CIRCUIT BREAKER IS IN OPENING STATE, THE DISCONNECTING SWITCH CAN BE OPERATED ON.**

#### **⚠ WARNING**

**IT IS STRICTLY PROHIBITED TO CLOSE THE GROUND SWITCH AND OPEN THE CABLE COMPARTMENT DOOR WHEN THE CABLE HEAD IS ENERGIZED.**



#### **⚠ WARNING**

**FOR THE OPERATION OF ANY CABINET TYPE, MAKE SURE TO CONFIRM THE CURRENT STATUS INDICATION OF THE SWITCH PRIOR TO AND AFTER THE OPERATION, TO AVOID UNNECESSARY MAL-OPERATION.**






#### **⚠ WARNING**

**THE RUM OFFERS MECHANICAL INTERLOCKING FUNCTION, FOR SATISFACTION OF THE REQUIREMENTS OF THE INTERLOCKING CONDITIONS, WITH MECHANICAL FORCED LATCHING. NO OPERATION SHALL BE FORCED WHEN IT IS DIFFICULT TO CONDUCT. OTHERWISE, THIS CAN EASILY CAUSE EQUIPMENT DAMAGE AND EVEN ACCIDENTS.**

## 4. RVAC cabinet types
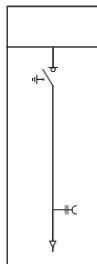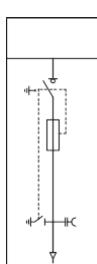
| RVAC series  | Primary scheme  | Type No.  | Name                     | Function   | Others  |
|--|---|-----------|--------------------------|--|---|
|    |    | RVAC-B(A) | Cable incoming cabinet   | The incoming/outgoing cable is connected directly to the bus, with a metal stainless steel protection case. The voltage display is offered, for the connection of incoming/outgoing cable.   | <ol style="list-style-type: none"> <li>1. The HV part is inside the SF6 gas.</li> <li>2. Expandable to the left and right or bushings can be added</li> <li>3. Termination head (for end cabinet)</li> <li>4. Equipped with voltage presence display</li> <li>5. Cabinet A is air insulated, while Cabinet B is SF6 gas insulated</li> </ol>  |
|    |    | RVAC-K    | Cable outgoing cabinet   | Equipped with a three-position load switch, to connect or break the connection of incoming/outgoing cable with the bus, enabling simultaneous grounding of the three phases of the incoming/outgoing cable, offering short circuit making capacity, for the control of the incoming/outgoing cable   | <ol style="list-style-type: none"> <li>1. Expandable on both sides</li> <li>2. Cable incoming/outgoing is available on the side</li> <li>3. Manual/electric operating mechanism</li> <li>4. Equipped with voltage presence display and fault indicator</li> <li>5. Ground switch interlocking device</li> </ol>   |
|   |  | RVAC-T    | Combination unit cabinet | Equipped with the same load switch as the incoming/outgoing cabinet, and connected in series with the fuse of high breaking capacity to constitute a combination unit, to control, open and close, and isolate the transformer and its distribution circuit, and protect against short circuit current and overload current at the high voltage side of the transformer, the transformer and the low voltage distribution circuit. | <ol style="list-style-type: none"> <li>1. For transformer protection(fuse protection) to the use of 1250 kVA transformer</li> <li>2. Transfer current 1500A</li> <li>3. Expandable on both sides</li> <li>4. Both ends of the fuse are grounded during side incoming maintenance</li> <li>5. Manual/electric operating mechanism</li> <li>6. Equipped with voltage presence display and ground interlocking device</li> <li>7. Optional relay protection and trip unit, for improving the performance of the fuse when breaking at small currents.</li> <li>8. Optional thermal switch start tripping device to provide the transformer with</li> </ol> |
|  |  | RVAC-L    | Bus coupling cabinet     | Equipped with a two-position load switch, with load connecting or breaking main bus option for bus coupling.   | <ol style="list-style-type: none"> <li>1. Main bus is not grounded</li> <li>2. Rising cabinet is not needed</li> <li>3. Incoming cabinet can be interlocked with</li> <li>4. Key locks can be supplied</li> </ol>   |

## 4. RVAC cabinet types (Continued)
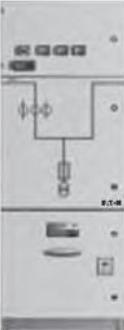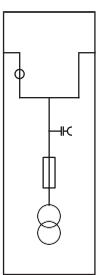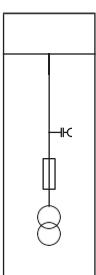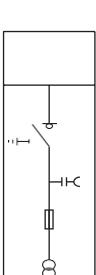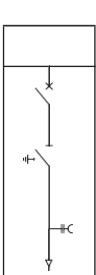
| RVAC series   | Primary scheme  | Type No.   | Name                            | Function   | Others  |
|---|---|------------|---------------------------------|--|---|
|    |    | RVAC-M     | Metering cabinet                | Equipped with normal current transformer and voltage transformer, for the convenience of inspection by power sectors, easy to be used with any other cabinet, for the metering of electrical power   | <ol style="list-style-type: none"> <li>1. Air insulation</li> <li>2. Bus connection</li> <li>3. Equipped with electromagnetic lock, to prevent from entrance into live sections by mistake</li> <li>4. Optional ammeter, voltmeter, watt hour meter, PT fuse and lightning arrester</li> <li>5. As per the requirements of power companies</li> <li>6. Several different schemes</li> </ol>   |
|   |    | RVAC-PT-I  | Voltage transforming cabinet-I  | Type I is equipped with a voltage transformer and connected directly to the bus, to monitor the system voltage and provide operating power supply (the cabinet is gas insulated).  | <ol style="list-style-type: none"> <li>1. Unexpandable on the left and right, nor adding bushings</li> <li>2. Termination head (for end cabinet)</li> <li>3. Equipped with voltage presence display and voltage transformer</li> </ol>  |
|  |  | RVAC-PT-II | Voltage transforming cabinet-II | Type II is equipped with a three-position load switch, with optional load connecting or breaking voltage transformer and grounding, to monitor the system voltage and provide operating power supply   |   |
|  |  | RVAC-V     | Circuit breaker cabinet         | Equipped with a vacuum circuit breaker, connected in series with a three-position disconnecting switch, the circuit breaker placed at the bus side, the disconnecting switch at the incoming/outgoing cable side, with optional regular relay protection device. | <ol style="list-style-type: none"> <li>1. Vacuum circuit breaker</li> <li>2. Three-position disconnecting switch / ground switch</li> <li>3. Rated short circuit breaking current 20kA</li> <li>4. Operating life: circuit breaker: 10,000 operations, disconnecting switch: 5,000 operations, ground switch: 2,000 operations</li> <li>5. Voltage presence indication</li> <li>6. Short circuit and ground fault indicator</li> <li>7. Current transformer</li> <li>8. Relay protection device</li> <li>9. Optional forced latching device at the incoming side</li> </ol> |

## Chapter 5 Operation, maintenance and repair

### ⚠ WARNING

**THE OPERATION, MAINTENANCE AND REPAIR OF THE PRODUCT SHALL BE CONDUCTED ONLY BY PROPERLY TRAINED PROFESSIONAL STAFF.**

#### 1. Notice for operations

##### 1.1. Inspection prior to operation

The RMU can be put into operation right after the completion of installation and commissioning. Check the mechanisms completely before running to see whether each functional circuit switch is in open position, whether the voltage presence display is normal, whether the indications are indicating correctly, whether the interlocking mechanism is operating properly, whether the pressure meter indication is at the rated pressure, whether the fuse is installed in the combination unit circuit. Properly lubricate the drive parts, and tighten the loose nuts and screws.

#### 1.2. SF6 gas control and supervision

Pure SF6 gas is colorless, tasteless, non-toxic, and not easy to be noticed. However, SF6 gas will deposit in the lower part of the area, because SF6 gas has bigger density than the air. When the density of SF6 in the air exceeds a certain amount, SF6 can make people suffocate. Therefore, before the staff goes into the installation site, especially into low-lying places such as the basement and the cable trench, the place must be ventilated, and the oxygen concentration in the air shall be detected. Only when the oxygen concentration is greater than 18%, the work shall be started. From the perspective of environmental protection and safety, the concentration of SF6 in the air should not exceed 1000 PPM.

The SF6 gas should maintain a certain density within the enclosure. A certain amount of gas shall be released when the density of use exceeds the upper limit. A certain amount of gas shall be filled when the density of use is lower than the lower limit. The RMU uses a pressure meter to check the SF6 gas inside the enclosure, while the SF6 gases of same density offer different pressures at different temperatures, the curve as shown in **Figure 19**.

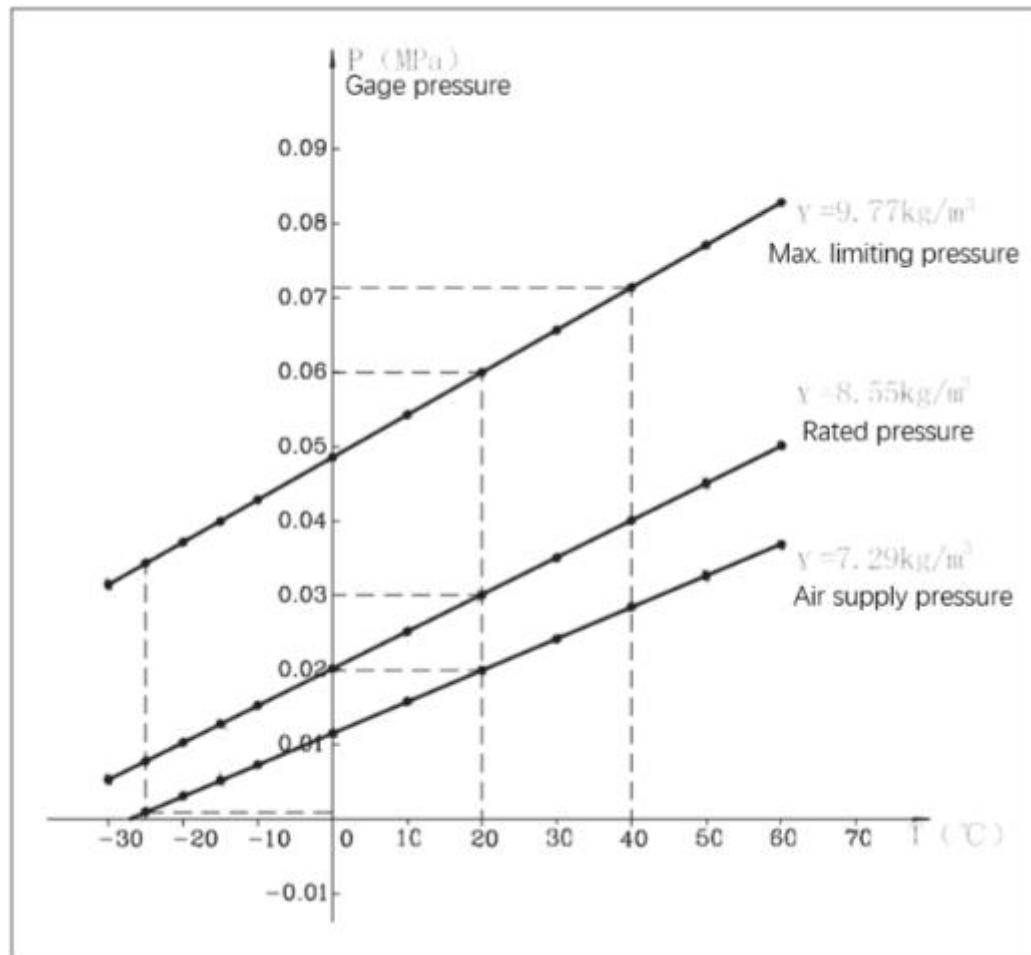


Figure 19 Pressure curve according to gas density and temperature change

## 2. Maintenance and repair

The RMU shall be maintained and repaired as specified in relevant regulations. Generally, there are four different inspections, including patrol inspection, general inspection, regular inspection and temporary maintenance.

### 2.1. Patrol inspection

This mainly refers to appearance inspection on the equipment during operation. Make a visual check for any abnormal conditions, on a daily or weekly basis, or according to the enterprise standard of the using unit.

| Item                                 | Inspection content   | Remark |
|--------------------------------------|--|--------|
| External conditions of the equipment | <ol style="list-style-type: none"> <li>1. The indication status of the breaking-closing indicator;</li> <li>2. Whether there is abnormal sound or odor;</li> <li>3. Whether the HV presence display is normal</li> <li>4. Whether the external surface of the cable is damaged</li> <li>5. The indication status of SF<sub>6</sub> pressure meter</li> </ol> |        |
| Spring operating mechanism           | 1. Whether the breaking-closing indication is correct  |        |

### 2.2. General inspection

This refers to the general inspection and maintenance from the outside when the RMU is stopped for running.

| Item                      | Inspection content  | Period              | Remark   |
|---------------------------|---|---------------------|--|
| Mechanical operation test | <ol style="list-style-type: none"> <li>1. Opening and closing indication status</li> <li>2. Opening/closing time measurement to check for any exceptions</li> <li>3. To confirm whether the indication meter is working properly</li> <li>4. To check whether the secondary circuit wiring is loose</li> <li>5. Lubrication and cleaning</li> </ol> | Once every 3 years. | Conduct manual opening-closing operation once every year, if the switch is not operated frequently |
| Fuse                      | To measure the changes of internal resistance of the fuse   | Once every 3 years  | The change of the inner resistance variations shall be within $\pm 10\%$                           |
| External connections      | To check the fastening status of the sealing parts  | Once every 3 years  | Mechanical inspection  |
| Testing                   | To measure circuit resistance and see whether there are any abnormal changes.   | Once every 3 years  | Electrical inspection  |

### 2.3. Regular inspection

This refers to detailed inspection and maintenance from the outside when the RMU is stopped for running.

| Item                      | Inspection content   | Period              | Remark   |
|---------------------------|--|---------------------|--|
| Mechanical operation test | <ol style="list-style-type: none"> <li>1. Opening and closing indication status</li> <li>2. To check whether the mechanisms and the pins and shafts of each part are normal</li> <li>3. To replace or repair the corrosive, deformed and damaged parts in the operating mechanism</li> <li>4. To confirm whether the indication meter is working properly</li> <li>5. To check whether the secondary circuit wiring is loose</li> <li>6. Lubrication and cleaning</li> </ol> | Once every 12 years |  |
| Fuse                      | To measure the changes of the internal resistance of the fuse  | Once every 12 years | The change of the inner resistance variations shall be within $\pm 10\%$ |
| External connections      | To check the fastening status of the sealing parts   | Once every 12 years | Mechanical inspection  |
| Testing                   | To measure the circuit resistance and see whether there are any abnormal changes; Opening/closing operation characteristics test   | Once every 12 years | Electrical inspection  |

## 2.4. Temporary maintenance

This refers to temporary maintenance on the parts necessary for maintenance in the following cases:

When exceptional situation occurs;

When the high voltage switchgear has reached the specified number of operations or the electrical life reaches relevant rules shown in below table.

| No. | High voltage switch component name | Operating conditions                  | Specified number of operations |
|-----|------------------------------------|---------------------------------------|--------------------------------|
| 1   | Loadswitch                         | No-load operation                     | 5,000 operations               |
|     |                                    | Breaking rated active load current    | 2,00 operations                |
|     |                                    | Breaking rated cable charging current | 10 operations                  |
|     |                                    | Closing short circuit fault           | 5 operations                   |
| 2   | Groundswitch                       | No-load operation                     | 2,000 operations               |
|     |                                    | Closing short circuit fault           | 2 operations                   |

### **⚠WARNING**

**WHEN ANY INDICATOR ON THE NUMBER OF OPERATIONS OF THE ELECTRICAL LIFE SPECIFIED IN THE ABOVE TABLE HAS BEEN REACHED, THE DEVICE SHALL BE WITHDRAW AND QUIT OPERATION.**

## 2.5. Testing after repair

Usually, inspections shall be conducted after the repair of the RMU, including main circuit resistance measurement, seal tightness test, and main circuit power frequency withstand voltage test.

## Chapter 6 Supplied documents and accessories

The following documents and accessories are supplied when the product is delivered from factory:

- Product certificate (one copy)
- Product packing list (one copy)
- Product factory test report (one copy)
- Secondary schematic diagram and wiring diagram (one set)
- Installation operation instruction (one copy)

## Chapter 7 Ordering information

The users shall submit the following technical information upon ordering:

- Secondary wiring plan, arrangement diagram, and floor layout plan of the main circuit;
- Secondary line schematic diagram;
- Types, specifications and quantities of all designated electrical components;
- Electric equipment summary table;
- Please make it clear when the switchgear is to be used under special environment conditions
- Please specify category and quantity when other or a large number of accessories and spare parts are needed.

## Disclaimer of warranties and limitation of liability

The information, recommendations, descriptions, and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment, and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted.

Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

**THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON.**

**THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.**

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein.

The information contained in this manual is subject to change without notice.

**Eaton Corporation**  
Asia Pacific Headquarter No.3,  
Lane 280, Linhong Road,  
Changning District,  
Shanghai 200335  
Tel: 86-21-52000099  
Fax: 86-21-52000200

© 2018 Eaton Corporation  
All Rights Reserved  
Printed in China  
Publication No. IL0102002E  
Mar 2019



Eaton is a registered trademark of Eaton Corporation.

All trademarks are property of their respective owners.